



List of spare parts kits concerned by this process instruction

MIC2100035	L-EXT-REARVIEW-MIRROR-ASS-TEXTURED-BLACK
MIC2100082	L-REARVIEW-MIRROR-FASTENING-REINFORCEMENT
MIC2100078	R-EXT-REARVIEW-MIRROR-ASS-TEXTURED-BLACK
MIC2100083	R-REARVIEW-MIRROR-FASTENING-REINFORCEMENT

Safety recommendations

1 - Tightening

Specific tools required

1 - Torque wrench



Remove:

- [MIC2100008](#) - Front wing
- Unclip the rearview mirror control (1) by lifting the clip (2) inside the rearview mirror control support (3) (Fig.1 and 3)
- > Extract the control (1) and remove the disk seal (4) from the control
- Unscrew the 3 fastening screws (5)
- Remove the rearview mirror with the mount reinforcement (6)

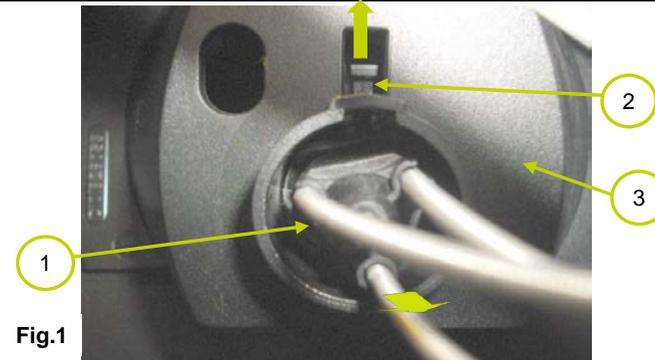


Fig.1

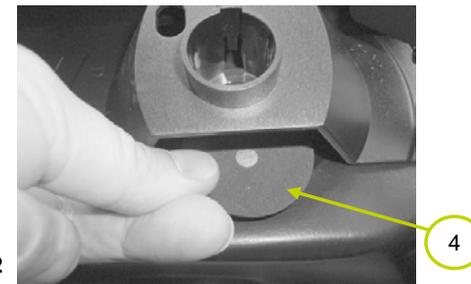


Fig.2

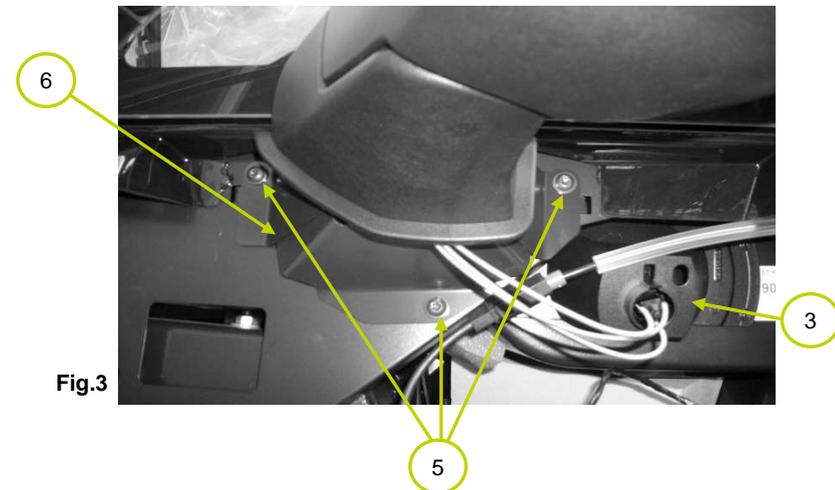


Fig.3



- Unscrew the fastening screw (7) to remove the rearview mirror mount reinforcement (**Fig.4**)



- Refit in reverse order to removal



- > Apply the recommended tightening torque - [SAV-MIA0000004-Tightening Torque](#) -
- > When refitting the rearview mirror control, place the disk seal between the panel and the rearview mirror control support (**4**) (**Fig.2**)
- > check that the control is correctly clipped (**1**) onto its support (**Fig.1**)

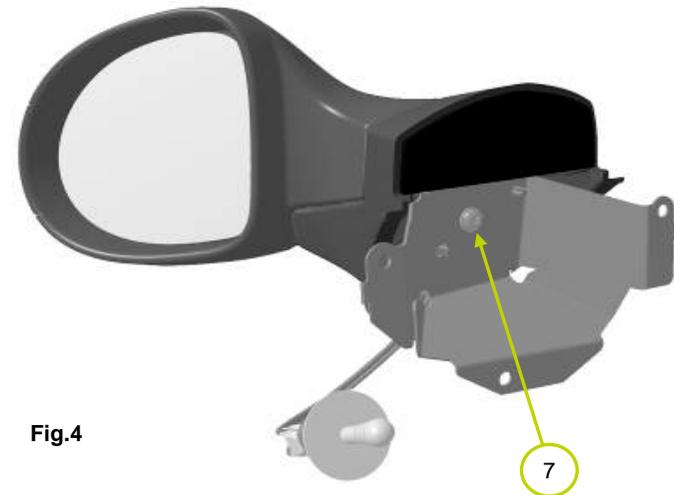


Fig.4