

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
7	RIGHT-HAND REAR PRETENSIONER
15	REAR DOOR LOCKING WARNING LIGHT
71	SWING DOOR ELECTRIC LOCKING
84	TIPPER PUMP ASSEMBLY
85	TIPPER REMOTE CONTROL
86	TIPPER CONTROL RELAY
88	TIPPER LOWERING SOLENOID VALVE
90	PASSENGER AIR CONDITIONING EVAPORATOR FAN
91	CONDENSER AIR CONDITIONING FAN
92	SIGNAL RELAY 1 AIR CONDITIONING CONDENSER
93	EVAPORATOR AIR CONDITIONING SIGNAL 2 RELAY
94	HAZARD WARNING LIGHT AUTHORISATION RELAY 1
95	HAZARD WARNING LIGHT AUTHORISATION RELAY 2
96	REAR DOOR LOCKING CONTROL
98	DOOR SILL LIGHT
99	EMERGENCY STOP DOOR SILL LIGHT RELAY
101	CIGARETTE LIGHTER
103	ALTERNATOR
104	STARTING SWITCH
105	MAIN ELECTROMAGNETIC HORN
106	ELECTROPNEUMATIC HORN
107	BATTERY
108	IGNITION COIL
110	ANTI-LOCK BRAKING SYSTEM PRESSURE UNIT HOUSING
112	REAR TIMING DEVICE
113	FRONT TIMER UNIT
115	ELECTRIC PUMP REGULATOR UNIT
116	HEADLIGHT WASHER TIMER
117	LIGHTS ON WARNING BUZZER/DRIVING SCHOOL ALARM
118	ANTI-LOCK BRAKING SYSTEM COMPUTER
119	AUTOMATIC TRANSMISSION COMPUTER
120	INJECTION COMPUTER
121	REAR FOGLIGHTS CONTROL
122	FRONT FOG LIGHT CONTROL
123	CENTRAL DOOR LOCKING CONTROL
124	HEATING CONTROL
125	HAZARD WARNING LIGHT CONTROL
126	COLD AIR BLOWER SWITCH
127	REAR SCREEN WIPER CONTROL
128	HEATED REAR WINDOW CONTROL
129	GEAR SELECTOR CONTROL
130	REAR RIGHT-HAND ELECTRIC WINDOW CONTROL
131	REAR LEFT-HAND ELECTRIC WINDOW CONTROL
132	DRIVER'S SIDE ELECTRIC WINDOW CONTROL
133	PASSENGER'S SIDE ELECTRIC WINDOW CONTROL
134	ELECTRIC REAR-VIEW MIRROR CONTROL
135	REAR WINDOW WINDER LOCKING SWITCH
137	FLASHER UNIT
138	REAR RIGHT DOOR ELECTRIC LOCKING
139	REAR LEFT DOOR ELECTRIC LOCKING
140	DRIVER'S DOOR ELECTRIC LOCKING
141	CENTRAL LOCKING FOR PASSENGER DOOR
142	BOOT LID ELECTRIC LOCKING

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
143	LOW WASHER FLUID SENSOR
144	COOLANT MINIMUM LEVEL SENSOR
145	COMBINED WIPER-WASHER
146	PINKING SENSOR 1
147	MANIFOLD PRESSURE SENSOR
148	OIL PRESSURE SENSOR
149	TDC SENSOR
150	RIGHT REAR WHEEL SENSOR
151	LEFT REAR WHEEL SENSOR
152	RIGHT FRONT WHEEL SENSOR
153	LEFT FRONT WHEEL SENSOR
154	TAILGATE SWITCH
155	REVERSING LIGHTS SWITCH
156	HANDBRAKE SWITCH
157	BRAKE PEDAL SWITCH
158	FULL LOAD SWITCH
160	BRAKE SWITCH
161	PASSENGER GLOVEBOX SWITCH
162	FLOW METER
163	STARTER
164	COLD AIR BLOWER
165	LUGGAGE COMPARTMENT LIGHTING
166	RIGHT-HAND REGISTRATION PLATE LIGHTING
167	LEFT-HAND REGISTRATION PLATE LIGHTING
168	GLOVE COMPARTMENT LIGHT
169	EGR SOLENOID VALVE
171	AIR CONDITIONING CLUTCH
172	RIGHT REAR LIGHT
173	LEFT REAR LIGHT
174	RIGHT-HAND REAR FOG LIGHT
175	LEFT-HAND REAR FOG LIGHT
176	RIGHT FRONT FOGLIGHT
177	LEFT FRONT FOGLIGHT
178	RIGHT REAR RABBET SWITCH
179	LEFT REAR RABBET SWITCH
180	DRIVER'S RABBET SWITCH
181	PASSENGER'S RABBET SWITCH
182	RIGHT-HAND REVERSING LIGHT
183	LEFT-HAND REVERSING LIGHT
184	RIGHT HEADLIGHT
185	LEFT HEADLIGHT
186	POWER ASSISTED STEERING ELECTRIC PUMP UNIT
187	HEATER BLOWER
188	COOLING FAN UNIT
189	RIGHT REAR SPEAKER
190	LEFT REAR SPEAKER
191	FRONT RIGHT DOOR SPEAKER
192	FRONT LEFT DOOR SPEAKER
193	INJECTOR 1
194	INJECTOR 2
195	INJECTOR 3
196	INJECTOR 4
197	INJECTOR 5

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
198	INJECTOR 6
199	FUEL GAUGE
200	REAR SCREEN DE-ICING
201	REAR RIGHT-HAND WINDOW MOTOR
202	REAR LEFT-HAND WINDOW MOTOR
203	DRIVER'S WINDOW MOTOR
204	PASSENGER ELECTRIC WINDOW MOTOR
205	PRESSURE SWITCH
206	AIR CONDITIONING TRI-FUNCTION PRESSURE SWITCH
207	BRAKE FLUID MIN LEVEL SENSOR
209	MONOLEVER
210	DIGITAL OR ANALOGUE CLOCK
211	REAR SCREEN WIPER MOTOR
212	WINDSCREEN WIPER MOTOR
213	FRONT COURTESY LIGHT
214	REAR RIGHT-HAND COURTESY LIGHTS
215	REAR LEFT-HAND COURTESY LIGHTS
216	FRONT RIGHT-HAND BRAKE PAD
217	FRONT LEFT-HAND BRAKE PAD
218	FUEL PUMP
219	HEADLIGHT WASHER PUMP
221	WINDSCREEN WASHER PUMP
222	THROTTLE POTENTIOMETER
224	POWER ASSISTED STEERING PRESSURE SWITCH
225	DIAGNOSTIC SOCKET
226	RIGHT-HAND HEADLIGHT
227	LEFT-HAND HEADLIGHT
228	IDLE SPEED REGULATOR
229	HORN RELAY
230	REAR FOG LIGHTS RELAY
231	FRONT FOG LIGHTS RELAY
232	STARTER RELAY
233	COLD AIR BLOWER RELAY
234	FAN ASSEMBLY RELAY
235	HEATED REAR SCREEN RELAY
236	FUEL PUMP RELAY
237	TWIN HEADLIGHTS RELAY
238	INJECTION LOCKING RELAY
239	DRIVER'S ELECTRIC REAR-VIEW MIRROR
240	PASSENGER ELECTRIC REAR-VIEW MIRROR
241	LIGHTING DIMMER
242	DOWNSTREAM OXYGEN SENSOR
243	OIL LEVEL SENSOR
244	WATER INJECTION TEMPERATURE SENSOR
245	EXTERNAL TEMPERATURE SENSOR
246	ELECTRIC CUT-OUT SOLENOID VALVE
247	INSTRUMENT PANEL
248	FAN UNIT THERMAL SENSOR
249	INFRARED TRANSMITTER
250	VEHICLE SPEED SENSOR
251	COOLANT DUAL FUNCTION TEMPERATURE SWITCH
253	RIGHT FRONT SPEAKER
254	LEFT FRONT SPEAKER

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
255	RIGHT FRONT TURN SIGNAL LIGHT
256	LEFT FRONT TURN SIGNAL LIGHT
257	PREHEATING UNIT
258	HEATER PLUGS
259	THERMAL SENSOR
260	PASSENGER COMPARTMENT FUSE BOX AND RELAY
261	RADIO
262	COOLING FAN AND AIR CONDITIONING
264	CENTRAL DOOR LOCKING TIMER
265	COURTESY LIGHT CONSOLE
267	RIGHT REPEATER
268	LEFT REPEATER
272	INJECTION AIR TEMPERATURE SENSOR
273	ENGINE SPEED SENSOR
274	AIR CONDITIONING SOLENOID VALVE
278	PINKING SENSOR 2
281	DIPPED HEADLIGHTS RELAY
282	FUEL FILLER FLAP ELECTRIC LOCKING CONTROL
283	ADDITIONAL FUEL PUMP
288	RUNNING LIGHT MAIN RELAY
289	RUNNING LIGHT WATCHDOG RELAY
290	RUNNING-LIGHT CODED RELAY
292	LIGHTING DIMMER RELAY
293	GENERAL FEED
294	HEATED REAR SCREEN TIMING DEVICE
295	WARNING LIGHT UNIT
298	HEATING DEVICE
299	RELAY CONTROL PLATE
300	REAR CROSSMEMBER COURTESY LIGHT
302	VARIABLE POWER ASSISTED STEERING RELAY
303	AUTOMATIC TRANSMISSION SELECTOR LIGHT
304	SUNROOF
309	MULTIFUNCTION BUZZER
310	INJECTION POWER MODULE 1
311	COURTESY LIGHT TIMER
312	CONSUMER CUT-OUT RELAY
313	TACHOMETER RELAY
315	FRONT WIPER SPEED 2 RELAY
317	SUNROOF CONTROL
318	CARBURETTOR BASE RESISTANCE
319	AIR CONDITIONING CONTROL PANEL
320	BASE FAN ASSEMBLY AND AIR CONDITIONING
321	AIR CONDITIONING FAN ASSEMBLY RESISTOR
322	AIR CONDITIONING AND POWER ASSISTED STEERING LED
323	AIR CONDITIONING AND P.A.S. SOLENOID VALVE LED
325	RADIO SATELLITE CONTROL
328	FRONT LH COURTESY LIGHT
329	FRONT RH COURTESY LIGHT
330	REAR CIGARETTE LIGHTER
331	CRUISE CONTROL SWITCH
333	DRIVER'S SEAT BELT SWITCH
335	FAN SPEED 1 RELAY
336	FAN SPEED 2 RELAY

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
337	FAN ASSEMBLY 3-SPEED RELAY
338	TURBO PRESSURE REGULATOR
343	OIL TEMPERATURE SENSOR
346	REGULATION PUMP SOLENOID VALVE
350	REAR LEFT-HAND BRAKE PAD
351	REAR RIGHT-HAND BRAKE PAD
354	FRONT LEFT-HAND BOOSTER CUSHION MOTOR
360	VOICE SYNTHESISER CONTROL
361	ABS HYDRAULIC UNIT
362	TERMINAL BOARD + BATTERY
363	VOICE SYNTHESISER COMPUTER
364	VOICE SYNTHESISER SPEAKER
365	RIGHT-HAND TWEETER SPEAKER
366	LEFT-HAND FRONT TWEETER SPEAKER
367	RIGHT HAND BONNET SWITCH
368	LEFT-HAND BONNET SWITCH
369	TURBO BEARING COOLANT PUMP
371	PETROL VAPOUR ABSORBER
373	CRUISE CONTROL COMPUTER
376	FRONT LEFT-HAND SEAT ADJUSTMENT CONTROL
377	FRONT RIGHT-HAND SEAT ADJUSTMENT CONTROL
378	FRONT LEFT-HAND BOOSTER CUSHION ADJUSTMENT CONTROL
379	FAST IDLE RELAY
380	ADAC CONVERSION COMPUTER
381	CARBURETTOR
384	MANIFOLD HEATER
385	DRIVER'S HEATED SEAT
386	PASSENGER HEATED SEAT
387	OIL PRESSURE SENSOR
392	DRIVING ASSISTANCE DISPLAY CONTROL
394	ELECTRIC AERIAL
398	EGR SOLENOID VALVE
402	OIL TEMPERATURE SENSOR
403	SECONDARY ELECTRO-MAGNETIC WARNING BUZZER
404	ADV TIMING SOLENOID VALVE (KSB COLD START DEVICE)
406	PRE-HEATER TEMPERATURE SENSOR
408	EVAPORATOR SENSOR
409	POWER ASSISTED STEERING PUMP ASSEMBLY RELAY
411	AIR CONDITIONING PRESSURE SWITCH
412	FAST IDLE SOLENOID VALVE
414	WATER IN DIESEL SENSOR
415	HEADLAMP WIPER SOLENOID VALVE
416	IDLING CUT-OFF CAPACITOR
417	AIR CONDITIONING RECIRCULATION RELAY
418	PASSENGER COMPARTMENT TEMPERATURE SENSOR FAN
419	AIR CONDITIONING CONTROL UNIT
420	MIXING FLAP
426	TURBOCHARGER OPENING CONTROL SOLENOID VALVE
427	ALARM COMPUTER
433	ALARM ULTRASOUND SENSOR
436	TURBO PRESSURE SOLENOID VALVE
438	BONNET SWITCH
440	HEATED SEAT CONTROL

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
442	AUTOSUPPLY ALARM SIREN
444	FRONT MAP READING LIGHT
447	REAR FOG LIGHT INHIBITION RELAY
449	DIESEL FUEL HEATER RESISTOR
450	DIESEL FUEL HEATER RELAY
458	REAR FOG LIGHT AND REVERSING LIGHT
459	REAR WINDOW WIPER TIMER
462	TAILGATE REGISTRATION PLATE LIGHTING
463	QUARTER PANEL LIGHT
464	COURTESY LIGHT CONTROL
466	SHUNT UNIT
467	DIPPED/SIDE LIGHTS RELAY
469	MONITOR CONTROL
470	DRIVING SCHOOL HIGH-SPEED WIPER RELAY
471	ELECTRIC WINDOW CLOSER CONTROL RELAY
472	RADIO CUT-OFF RELAY
474	AIR CONDITIONING COMPRESSOR CONTROL RELAY
475	RECYCLING MOTOR
476	INTEGRATED DRIVESHAFT COMPUTER
477	DIESEL HEATER ACCELERATOR PUMP
478	4X4 ACTIVATION SWITCH
479	
480	HOT AIR EXTRACTION SENSOR
484	4X4 DRIVE SOLENOID VALVE
485	MULTIFUNCTION SWITCH
486	PASSENGER SEAT BELT SWITCH
490	FRONT RIGHT 1ST POSITION SWITCH
491	FRONT LEFT 1ST POSITION SWITCH
492	CARPHONE CONTROL UNIT
495	FRONT RIGHT-HAND SEAT
496	FRONT LEFT-HAND SEAT
497	4X4 ANTI-LOCK BRAKING SYSTEM ACCELEROMETER
500	TRANSVERSE ACCELEROMETER
501	SEAT AND RETRO STORAGE COMPUTER
502	VARIABLE POWER ASSISTED STEERING COMPUTER
503	DECODER COMPUTER
504	RIGHT-HAND REAR MAP READING LIGHT
505	LEFT-HAND REAR MAP READING LIGHT
506	ACCESSORIES SOCKET
508	RIGHT-HAND LUGGAGE COMPARTMENT LIGHT
509	LEFT-HAND LUGGAGE COMPARTMENT LIGHT
511	COURTESY LIGHT CONTROL
512	MAP READING LIGHT CONTROL
515	SEAT POSITION MEMORY COMPUTER
516	SEAT POSITION MEMORY COMPUTER 2
517	CONTROL KEYPAD AND SEAT POSITION MEMORY
519	FRONT LEFT DOOR AREA LIGHT
520	RIGHT-HAND FRONT DOOR AREA LIGHT
521	REAR RIGHT-HAND DOOR AREA LIGHT
522	REAR LEFT-HAND DOOR AREA LIGHT
523	DRIVER'S DOOR LIGHT
524	FRONT PASSENGER DOOR LIGHT
525	RIGHT-HAND REAR DOOR LIGHT

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
526	LEFT-HAND REAR DOOR LIGHT
527	DRIVER'S CONTROL FOR REAR WINDOW CLOSER
528	DRIVER'S CONTROL FOR REAR WINDOW CLOSER
529	CENTRAL COURTESY LIGHT
531	CRUISE CONTROL CLUTCH SWITCH
532	DRIVER'S CONTROL FOR FRONT PASSENGER WINDOW CLOSER
534	VARIABLE SHOCK ABSORBER CONTROL
536	HEADPHONE SOCKET
537	LEFT HEADLIGHT CORRECTOR MOTOR
538	RIGHT HEADLIGHT CORRECTOR MOTOR
539	ENGINE COMPARTMENT LIGHTING SWITCH
540	VARIABLE POWER ASSISTED STEERING MOTOR
541	COURTESY MIRROR LIGHT
542	SELF-LEVELLING SUSPENSION (COA) ECU
543	VARIABLE SHOCK ABSORBER SYSTEM COMPUTER
544	ATTITUDE CORRECTOR ASSEMBLY RELAY
546	SELF-LEVELLING SUSPENSION PUMP UNIT
547	REAR LEFT-HAND SHOCK ABSORBER SOLENOID VALVE
548	REAR RIGHT-HAND SHOCK ABSORBER SOLENOID VALVE
549	FRONT LEFT-HAND SHOCK ABSORBER SOLENOID VALVE
550	FRONT RIGHT-HAND SHOCK ABSORBER SOLENOID VALVE
553	RIGHT-HAND REAR VEHICLE LEVEL SENSOR
554	VEHICLE REAR LEFT-HAND LEVEL SENSOR
557	TAILGATE CLOSING ASSISTANCE MOTOR
560	TAILGATE OPENING CONTROL
562	HEADLIGHT ADJUSTMENT CONTROL
564	FAN ASSEMBLY AIR / OIL EXCHANGER
565	THROTTLE BODY
567	ELECTRIC COOLANT PUMP
573	ELECTRIC COOLANT PUMP RELAY
574	ELECTRIC WATER PUMP DIODE
577	CARPHONE CONTROL UNIT
583	STEERING WHEEL ANGLE SENSOR
584	AIR CONDITIONING COMPRESSOR CLUTCH RELAY
585	PNEUMATIC PRESSURE SENSOR
586	HAZARD WARNING LIGHT CONTROL
588	DRIVER'S COURTESY MIRROR LIGHT
589	INJECTION PUMP
590	ALARM SWITCH
597	ENGINE AND RELAY FUSE BOX
599	WATER PUMP SUPPORT RELAY
601	HEATER MATRIX COOLANT TEMPERATURE SENSOR
602	REVERSING LIGHTS RELAY
603	STEERING COLUMN ADJUSTMENT CONTROL MEMORY
611	ELECTRIC SYSTEM IN THE LEFT-HAND SIDE OF THE WINDSCREEN
612	LEFT-HAND HEATED WINDSCREEN RELAY
613	HEATED WINDSCREEN CONTROL
615	DRIVER'S HEATED SEAT CONTROL
616	PASSENGER'S HEATED SEAT CONTROL
619	DOOR COMMAND RECEPTOR
620	TWIN THROTTLE POTENTIOMETER
627	CRUISE CONTROL SWITCH
628	CAPOA+ SPEED SENSOR

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
629	RIGHT-HAND HEATED WINDSCREEN RELAY
630	ELECTRIC SYSTEM IN THE RIGHT-HAND SIDE OF THE WINDSCREEN
631	EXTERIOR TEMPERATURE INFORMATION MANAGEMENT MODULE
632	PREHEATER PLUGS 1 AND 3
633	PREHEATER PLUGS 2 AND 4
634	CLUTCH SENSOR
638	BUZZER/INSTRUCTOR'S INDICATOR LIGHT RELAY
639	RAISED BRAKE LIGHT
640	POWER LATCH RELAY ASSISTANCE RELAY (INJECTION RELAY)
644	CONTROLLED SUSPENSION COMPUTER
645	PASSENGER COMPARTMENT COMPUTER
646	HEATED WINDSCREEN RELAY
647	HEATED WINDSCREEN
649	STEPPER MOTOR
651	LIQUID CRYSTAL PANEL
652	AIR CONDITIONING CONTROL RELAY
653	CLOCK/EXTERNAL TEMPERATURE/CARPHONE DISPLAY ASSEMBLY
654	ALARM KEY AND EQUIPMENT BOLT KEY
656	HEATER PLUG WITH PRESSURE SENSOR
657	STARTER RELAY 2
659	AIR CONDITIONING/COOLING SEPARATION LED
660	AIR CONDITIONING CUT-OUT HEAT SENSOR
661	AIR CONDITIONING CUT-OFF TIMER CONTROL RELAY
662	NAVIGATION COMPUTER
663	DOUBLE-ENDED IGNITION COIL 1
664	DOUBLE-ENDED IGNITION COIL 2
665	DUAL IGNITION COIL 3
666	DUAL IGNITION COIL 4
667	BRAKE PEDAL TRAVEL SENSOR
672	RESISTOR UNIT
674	DOUBLE REAR FOG LIGHT/SCREEN SWITCH
675	CLUTCH PEDAL SWITCH
676	ACCELERATOR PEDAL SWITCH
677	FRONT AND REAR BI-DIRECTIONAL WASHER PUMP
678	EGR SOLENOID VALVE TEMPERATURE SWITCH
679	RADIO INTERFERENCE SUPPRESSOR
680	PREHEATER PLUG 1
681	PREHEATER PLUG 2
682	PREHEATER PLUG 3
683	PREHEATER PLUG 4
684	LASER SCANNER
686	POWER ASSISTED STEERING SOLENOID VALVE RELAY
687	DIODE UNIT
688	OIL LEVEL AND TEMPERATURE SENSOR
689	ROTARY SWITCH
690	ELECTRONIC THERMOSTAT RELAY
691	NAVIGATION AID SCREEN
692	CAR PHONE CLUSTER
693	CAR PHONE SPEAKER
694	LEFT-HAND HEATING JET
695	RIGHT-HAND HEATING JET
696	SHUNT
698	ACCESSORIES FEED/AFTER IGNITION ISOLATION DIODE

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
700	PERCOLATION FAN LOW SPEED RELAY
703	ELECTRIC WINDOW RELAY
704	HOOD WARNING BUZZER
705	HOOD BLOWER REAR SCREEN RELAY
706	HOOD SWITCH
708	REAR SCREEN BLOWER COVER
710	UNIT FUSE
711	DIESEL PUMP
713	CARAVAN CONNECTION
715	CAR PHONE COMMUNICATION INTERFACE
720	AIR CONDITIONING CUT-OFF RELAY
721	ANTI-LOCK BRAKING SYSTEM COMPUTER + ANTI-LOCK BRAKING SYSTEM HYDRAULIC UNIT
723	AUTOMATIC CLUTCH DIODE
724	AUTOMATIC CLUTCH PUMP UNIT
726	ENGAGED GEAR SENSOR
727	CLUTCH POSITION SENSOR
728	GEAR LEVER SENSOR
729	ACCELERATOR POSITION SENSOR
731	HEATED WINDSCREEN TIMER
734	DRIVER'S ONE TOUCH ELECTRIC WINDOW CONTROL
735	SEAT BELT REMINDER BUZZER
738	INJECTOR NEEDLE LIFT SENSOR
739	HEADLIGHT WASHER FLUID LOW SENSOR
740	+BATTERY/+ACCESSORIES FEED CIRCUIT SEPARATION DIODE
743	ALTIMETRIC CORRECTION RELAY
745	DIESEL FUEL HEATER CONTROL RELAY
746	CYLINDER SENSOR
748	RIGHT-HAND REAR SEAT CONTROL
750	CHILD SAFETY RELAY
751	AFTER IGNITION RELAY NO. 1
752	AFTER IGNITION RELAY N 2 (AP2)
753	HEADLIGHT WASHER PUMP RELAY
754	HYDRAULIC ELECTRIC INTERFACE
755	TRACTION CONTROL SWITCH
756	AIR BAG/PRETENSIONER COMPUTER
757	DRIVER'S PRETENSIONER
758	PASSENGER'S PRETENSIONER
759	BOOT LID 1ST POSITION SWITCH
760	REAR SCREEN/HEATED SCREEN CONTROL
762	GEARBOX PUMP ASSEMBLY RELAY
763	GEARBOX ALARM BUZZER
764	AIR PUMP SUPPLY RELAY
765	AIR PUMP MOTOR
768	VARIABLE INLET SOLENOID VALVE
770	AMBIENT LIGHT RELAY
771	DOOR/SEAT BELT WARNING MODULE
772	HEATER RELAY
774	PRETENSIONER SUPPLY
777	POWER SUPPLY FUSE BOARD
778	QUADRUPLE IGNITION COIL MODULE
779	AUTOMATIC TRANSMISSION MULTIFUNCTION SWITCH
780	AUTOMATIC TRANSMISSION VEHICLE SPEED SENSOR
781	RELATIVE PRESSURE SENSOR (AUTOMATIC GEARBOX)

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
782	ENGINE SPEED SENSOR (AUTOMATIC TRANSMISSION)
783	POWER RELAY UNIT 2
784	COMMAND RELAY BLOCK 2
785	VARIABLE DISTRIBUTION SYSTEM SUPPLY RELAY
788	FUEL TANK BREATHER SOLENOID VALVE
789	HANDS-FREE MOBILE PHONE MICROPHONE
791	CYLINDER 1 IGNITION COIL
792	CYLINDER 2 IGNITION COIL
793	CYLINDER 3 IGNITION COIL
794	CYLINDER 4 IGNITION COIL
795	CYLINDER 5 IGNITION COIL
796	CYLINDER 6 IGNITION COIL
798	DUAL MODE SOLENOID VALVE
799	INJECTION AIR FLOW METER
800	BLOWER CONTROL RELAY
801	CHARGE CIRCUIT NON-RETURN DIODE
802	ECU ANTI-RETURN DIODE / FUEL PUMP RELAY
805	HEATED WINDSCREEN RELAY
808	IGNITION SUPPLY RELAY
809	PASSENGER AIR BAG
810	RIGHT-HAND REAR HEATED QUARTER PANEL
811	LEFT-HAND REAR HEATED QUARTER PANEL
815	REAR LEFT-HAND HEATED SEAT CONTROL UNIT
816	REAR RIGHT-HAND HEATED SEAT CONTROL UNIT
817	WINDSCREEN DEMISTER RELAY BOARD 2
819	AIR FLAP SOLENOID VALVE
821	OPENING REAR WINDOW LOCKING
822	OPENING REAR WINDOW SWITCH
825	TRACTION CONTROL AND ECO/PERF SWITCH
831	PASSENGER HEATING CONTROL PANEL
832	PASSENGER'S CLIMATE CONTROL PANEL
833	FUEL PUMP AND SENDER UNIT
835	CONTROLLED CLUTCH PRESSURE SWITCH
839	INJECTION/CONTROLLED CLUTCH/IDLE SPEED REGULATION MOTOR COMPUTER FORWARD DIODE
841	LEFT-HAND ELECTRIC QUARTERLIGHT OPEN/CLOSE MOTOR
842	RIGHT-HAND ELECTRIC QUARTERLIGHT OPEN/CLOSE MOTOR
844	FUEL FILLER FLAP LOCKING MOTOR
845	NO. 2 PASSENGER AIR BAG
849	MULTIFUNCTION ELECTRIC CONTROL
850	POWER ASSISTED STEERING TORQUE SENSOR
851	TYRE PRESSURE COMPUTER
852	ELECTRIC WINDOW TIMER
853	+ AFTER IGNITION/+BEFORE IGNITION RELAY
854	WINDOWS SIMULTANEOUS CONTROL
857	INFRARED REMOTE CONTROL RELAY
860	ROTARY SWITCH
861	PASSENGER AIR BAG
863	DUAL FUNCTION AERIAL SUPPLY
864	FLOW VALVE AND CARBURETTOR FOOT TEMPERATURE SENSOR
866	DIESEL INJECTION ECU
867	REAR FOG LIGHT AND RIGHT-HAND REAR REVERSE LIGHT
868	REAR FOG LIGHT AND LEFT-HAND REAR REVERSE LIGHT
873	RH DISTRIBUTION MOTOR

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
874	LH DISTRIBUTION MOTOR
875	RH AIR INTAKE MOTOR
876	LH AIR INTAKE MOTOR
877	RH MIXER MOTOR
878	LH MIXER MOTOR
882	HOOD COVER UNLOCKING SWITCH
883	HOOD COVER LOCK
884	OPTIONAL BOOT MODULE
885	ELECTRIC HOOD
886	AERIAL AMPLIFIER
887	UPSTREAM OXYGEN SENSOR
888	CARMINAT SYSTEM RADIO DATA UNIT
892	BURNER SOLENOID VALVE
893	BURNER
896	TWIN-MODE MOTOR REDUCER
898	ADDITIONAL HEATER PLUG
899	DRIVER'S AIR BAG
902	TRACTION BATTERY SWITCH FOR LUGGAGE COMPARTMENT LID
903	ELECTROMAGNETIC SWITCH
904	TRACTION MOTOR
905	FWD ENGINE FAN ASSEMBLY
906	HEATING FUEL MINIMUM SWITCH
907	VACUUM PUMP
909	HEATER METERING PUMP
911	CHARGE CUT-OFF RELAY
916	CHARGING SOCKET
918	EMERGENCY STOP SWITCH
920	BRAKING POTENTIOMETER
921	ACCELERATOR POTENTIOMETER
922	TRACTION MOTOR FAN RELAY
923	HEATING SWITCH
925	INDEPENDENT HEATER
926	COMPUTER DISPLAY
927	IMPACT SENSOR (INERTIA SENSOR)
928	BATTERY CURRENT SENSOR
938	TRACTION BATTERY
941	HIGH VOLTAGE FUSE
945	INDEPENDENT HEATING TEMPERATURE SENSOR
946	ELECTRIC VEHICLE COMPUTER
947	CHARGE STATUS WARNING LIGHT
948	HOOD COVER CYLINDER SWITCH
949	5TH BOW CYLINDER SWITCH
950	MAIN CYLINDER SWITCH
951	ELECTRIC HOOD PUMP UNIT
952	ELECTRIC CUT-OFF SOLENOID VALVE + FORWARD ACTUATOR SOLENOID VALVE
953	WHEEL SPEED COMPUTER
954	SELF LEVELLING SUSPENSION ALARM CONTROL MODULE ECU
957	TRANSPONDER UNIT
959	LIGHTS ON BUZZER ANTI-RETURN DIODE/INSTRUMENT PANEL
961	BATTERY CUT-OUT
965	LS FAN ANTI-RETURN DIODE/1ST THRESHOLD TEMP SWITCH
967	ELECTRO-MAGNETIC HORN
968	AUTOMATIC GEARBOX LOCKING RELAY (SHIFT LOCK)

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
969	3RD IMPOSED SHIFT LOCK ELECTROMAGNET GEAR LEVER
971	"DP0" AUTOMATIC GEARBOX MODULE
972	CARMINAT KEYPAD
973	GPS UNIT (SATELLITE POSITIONING)
974	GPS AERIAL
977	BATTERY COOLANT PUMP
978	CHARGING SOCKET FLAP ELECTRIC LOCKING
979	OIL VAPOUR RECIRCULATION HOSE REHEATER
980	DIESEL PLUG RELAY UNIT
982	REAR COURTESY LIGHTS CONTROL RELAY
983	DIESEL INJECTION COMPUTER SUPPLY RELAY
985	FRONT LEFT-HAND HEATED SEAT CONTROL UNIT
986	FRONT RIGHT-HAND HEATED SEAT CONTROL UNIT
987	FRONT LEFT-HAND HEATED SEATBASE PAD
988	FRONT RIGHT-HAND HEATED SEATBASE PAD
989	DISCHARGE BULB COMPUTER
990	RIGHT-HAND FRONT POTENTIOMETER SENSOR
991	RIGHT-HAND REAR POTENTIOMETER SENSOR
993	ALARM ACTIVE DIODE
995	ELECTRONIC TACHOMETER
997	LPG COMPUTER
1000	LPG EXPANSION VALVE
1001	LPG TANK
1002	LPG SOLENOID VALVE ON TANK
1003	LPG OR PETROL SELECTOR SWITCH
1010	REAR PARTITION FAN MOTOR
1011	NAVIGATION AID INTERCONNECTION UNIT
1012	NAVIGATION AID SPEAKER
1013	VARIABLE CAMSHAFT
1014	ENGINE COOLING LOW SPEED FAN RESISTANCE
1016	PASSENGER COMPARTMENT FUSE BOX
1017	AUTOMATIC TRANSMISSION TURBINE SPEED SENSOR
1018	FEEDBACK RELAY (DOOR/BOOT LOCK)
1019	EXCHANGER FLOW LOCK-UP SOLENOID VALVE
1023	AIR CONDITIONING FAN OUTPUT MODULE
1024	FUEL LEVEL INDICATOR (LPG)
1026	DRIVER'S SIDE AIR BAG
1027	PASSENGER'S SIDE AIR BAG
1028	DRIVER'S SIDE SATELLITE
1029	PASSENGER SIDE SATELLITE
1030	RESISTANCE
1032	FUEL MANIFOLD PRESSURE SENSOR
1033	PROTECTED POSITIVE BATTERY
1034	RUNNING LIGHTS RELAY MOUNTING
1035	MAIN LIQUEFIED PETROLEUM GAS SOLENOID VALVE
1038	PROGRAMMING SHUNT (LPG COMPUTER)
1040	WINDSCREEN WIPER RELAY
1041	REAR WIPER CONTROL
1042	CENTRAL DOOR LOCKING RELAY
1043	ELECTRIC DOOR LOCKS UNLOCKING RELAY
1044	ONE-TOUCH ELECTRIC WINDOW RAISING RELAY
1045	ONE-TOUCH ELECTRIC WINDOW LOWERING RELAY
1047	INJECTION RELAY

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1048	TAILGATE ELECTRIC CONTROL UNIT
1049	THERMOPLUNGER RELAY
1050	CLUTCH SOLENOID VALVE
1051	ENGAGEMENT SOLENOID VALVE 1
1052	ENGAGEMENT SOLENOID VALVE 2
1053	SELECTION SOLENOID VALVE 1
1054	SELECTION SOLENOID VALVE 2
1055	ENGAGEMENT POSITION SENSOR
1056	SELECTION POSITION SENSOR
1057	CLUTCH POSITION SENSOR
1058	GEAR SELECTOR SWITCH
1059	SEQUENTIAL GEARBOX PRESSURE SENSOR
1060	GEARBOX INPUT SPEED SENSOR
1061	FUEL GAUGE RELAY
1062	DRIVER'S DOOR COMPUTER DIODE
1063	ALTERNATING CURRENT INVERTER
1066	FUEL TEMPERATURE SENSOR
1067	ADDITIONAL HEATING RELAY 1
1068	ADDITIONAL HEATING RELAY 2
1069	ADDITIONAL HEATING RELAY 3
1071	TURBOCHARGING PRESSURE SENSOR
1072	ADDITIONAL HEATER PLUG 2
1073	ADDITIONAL HEATER PLUG 3
1074	ADDITIONAL HEATER PLUG 4
1075	AIR SOLENOID VALVE
1076	MOTORISED THROTTLE BODY
1077	CYLINDER 1 PENCIL COIL
1078	CYLINDER 2 PENCIL COIL
1079	CYLINDER 3 PENCIL COIL
1080	CYLINDER 4 PENCIL COIL 4
1081	CRUISE CONTROL LIMITER START STOP CONTROL
1082	KEYLESS VEHICLE CARD READER
1083	KEYLESS VEHICLE FRONT RIGHT HANDLE PRESENCE DETECTOR
1084	KEYLESS VEHICLE FRONT LEFT HANDLE PRESENCE DETECTOR
1085	KEYLESS VEHICLE REAR RIGHT HANDLE PRESENCE DETECTOR
1086	KEYLESS VEHICLE REAR LEFT HANDLE PRESENCE DETECTOR
1087	KEYLESS VEHICLE ENGINE STOP/START CONTROL BUTTON
1088	STEERING COLUMN ELECTRIC LOCK
1091	DIAGONAL BRAKE 1 PRESSURE SENSOR
1092	DIAGONAL BRAKE 2 PRESSURE SENSOR
1093	BRAKE SERVO MICROSWITCH
1094	ANTI-LOCK BRAKING SYSTEM AND/OR ELECTRONIC STABILITY PROGRAM COMPUTER
1095	FRONT DRIVER'S SIDE LAP PRETENSIONER
1096	PASSENGER FRONT LAP PRETENSIONER
1097	LEFT-HAND REAR PRETENSIONER
1098	RIGHT-HAND REAR PRETENSIONER
1099	LEFT-HAND REAR SIDE AIR BAG
1100	RIGHT-HAND REAR SIDE AIR BAG
1101	DRIVER'S HEAD SIDE AIR BAG
1102	PASSENGER'S HEAD SIDE AIR BAG
1103	FRONT DRIVER'S SIDE CHEST AIR BAG
1104	FRONT PASSENGER'S SIDE CHEST AIR BAG
1105	FUEL FLOW ACTUATOR

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1106	ESP ON/OFF BUTTON
1107	CLUSTER SENSOR (YAW AND ACCELERATION SPEED)
1108	FRONT PASSENGER/CHILD SEAT PRESENCE SENSOR
1109	MANUAL GEARBOX NEUTRAL SENSOR/REVERSING LIGHTS
1110	PNEUMATIC PRESSURE CONTROL DISPLAY
1111	INSOLATION SENSOR
1112	AIR TOXICITY SENSOR
1113	ADDITIONAL PASSENGER COMPARTMENT HEATING
1114	DE-ICING DISTRIBUTION MOTOR
1115	WEIGHT DISTRIBUTION MOTOR
1116	FLAT TYRE SYSTEM COMPUTER
1118	FRONT PASSENGER FOOTWELL LIGHT
1119	DRIVER'S FOOTWELL LIGHT
1120	PASSENGER'S SIDE REAR PASSENGER FOOT LIGHT
1121	DRIVER'S SIDE REAR PASSENGER FOOT LIGHT
1122	DRIVER'S DOOR MULTIPLEX COMPUTER
1123	PASSENGER DOOR MULTIPLEX COMPUTER
1124	RAIN SENSOR COMPUTER
1125	CENTRAL COMMUNICATION UNIT
1126	TELEMATIC KEYBOARD
1127	VIDEO DISPLAY
1128	GSM AERIAL (MOBILE PHONE)
1129	GEAR LEVER DISPLAY
1130	DRIVER'S FRONT SEAT POSITION SENSOR
1131	PASSENGER FRONT SEAT POSITION SENSOR
1132	RIGHT-HAND REAR TWEETER SPEAKER
1133	LEFT-HAND REAR TWEETER SPEAKER
1134	CAMSHAFT SENSOR RANGE A
1135	BANK B CAMSHAFT SENSOR SIGNAL
1136	CAMSHAFT ANGLE VARIATOR RANGE A
1137	BANK B CAMSHAFT SHIFTER CONTROL
1138	DOWNSTREAM OXYGEN SENSOR RANGE B
1139	UPSTREAM OXYGEN SENSOR RANGE B
1140	GEARBOX OUTPUT SPEED SENSOR
1144	BATTERY DISCONNECTION MODULE
1146	CAPTEUR TEMPERATURE GAZ REFRIGERANT
1149	FREON CIRCUIT BYPASS SOLENOID VALVE
1150	VARIABLE CYLINDER ACTUATOR
1151	TAILGATE STRIKER
1152	DOORS/TAILGATE LOCKING STATUS LIGHT
1153	OPENING REAR WINDOW OPENING CONTROL
1154	ELECTRIC DOOR UNLOCKING
1155	ACCESSORIES RELAY 1
1156	PASSENGER COMPARTMENT FAN ASSEMBLY 1
1157	PASSENGER COMPARTMENT FAN ASSEMBLY 2
1158	PASSENGER COMPARTMENT FAN SPEED RESISTANCE UNIT
1159	PASSENGER COMPARTMENT FAN ASSEMBLY COMPUTER 2
1160	INDEPENDENT HEATING RELAY
1161	LPG SOLENOID VALVE RELAY
1162	FLYWHEEL ANTI-NOISE SOLENOID VALVE
1163	HEADWAY SWITCH (ADAPTIVE CRUISE CONTROL)
1164	ACCESSORIES COMPUTER
1165	SECOND COMPUTER

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1167	INJECTION CONTROL COMPUTER
1168	FRONT ELECTRIC WINDOW CLOSER ONE-TOUCH DUAL CONTROL
1169	REAR ELECTRIC WINDOW DUAL CONTROL
1170	FRONT ONE-TOUCH WINDOW CLOSER DUAL CONTROL
1171	REAR ONE-TOUCH WINDOW CLOSER DUAL CONTROL
1172	FRONT MULTIPLEX ONE-TOUCH WINDOW CLOSER DUAL CONTROL
1173	ADDITIONAL HEATING RELAY CONTROL COMPUTER
1174	ESP PRELOAD PUMP
1175	ESP SENSOR AND TRANSVERSE AND LATERAL ACCELERATION
1180	DC-DC CONVERTER
1183	FUEL PRESSURE SENSOR
1184	MULTIFUNCTION HORN
1186	LPG RELIEF SOLENOID VALVE
1187	BRAKE SERVO VACUUM SENSOR
1189	PETROL PRESSURE REGULATION SOLENOID VALVE
1190	RIGHT-HAND LATERAL DOOR ELECTRIC LOCKING
1191	LEFT-HAND LATERAL DOOR ELECTRIC LOCKING
1192	RIGHT-HAND LATERAL DOOR SWITCH
1193	LEFT-HAND LATERAL DOOR SWITCH
1194	TRANSPONDER AERIAL
1195	LPG PRESSURE SENSOR
1196	LPG PETROL PUMP CUT-OFF RELAY
1197	WINDSCREEN TEMPERATURE SENSOR
1198	RAIL PRESSURE REGULATOR
1199	FUEL CAP PRESENCE SENSOR
1200	SIDE DOOR LOCKING COMPUTER
1201	PASSENGER COMPARTMENT TEMPERATURE SENSOR/OPENING ELEMENTS WARNING LIGHT
1202	COOLANT GAS PRESSURE SENSOR
1203	ADDITIONAL BATTERY
1208	RADIO AERIAL
1209	PNEUMATIC SUSPENSION COMPRESSOR UNIT
1210	PNEUMATIC SUSPENSION COMPRESSOR RELAY
1212	INJECTOR 1
1213	INJECTOR 2
1214	INJECTOR 3
1215	INJECTOR 4
1216	AUTOMATIC PARKING BRAKE LEVER CONTROL UNIT
1217	AUTOMATIC PARKING BRAKE ELECTRICAL UNIT
1218	PARKING AID LEFT-HAND REAR OUTER DETECTION SENSOR
1219	PARKING AID REAR OUTER DETECTION SENSOR
1220	PARKING AID REAR INNER DETECTION SENSOR
1221	PARKING AID LEFT-HAND REAR INNER DETECTION SENSOR
1222	PARKING AID COMPUTER
1223	PARKING AID BUZZER
1224	TURBOCHARGER POSITION SENSOR
1225	DRIVER AIR CONDITIONING CONTROL
1226	PASSENGER AIR CONDITIONING CONTROL
1227	PASSENGER SIDE REAR AIR CONDITIONING CONTROL
1228	DRIVER'S SIDE REAR AIR CONDITIONING CONTROL
1230	REAR AIR DISTRIBUTION MOTOR
1231	ESP SPEED SENSOR
1232	ELECTRIC POWER ASSISTED STEERING SYSTEM
1233	ADJUSTMENT SOLENOID VALVE 1

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1234	ADJUSTMENT SOLENOID VALVE 2
1235	EVAPORATOR AIR SENSOR 2
1240	ELECTROMAGNETIC BATTERY CUT-OUT RELAY
1243	FRONT PASSENGER SEAT ISOFIX A SENSOR
1244	FRONT PASSENGER SEAT ISOFIX B SENSOR
1245	DRIVER'S SIDE REAR HEAD CURTAIN SIDE AIR BAG
1246	PASSENGER SIDE REAR HEAD CURTAIN SIDE AIR BAG
1249	DRIVER'S ADAPTIVE FRONT AIR BAG
1250	DASHBOARD AIRBAG EARTH
1251	THROTTLE BODY AIR TEMPERATURE SENSOR
1253	UPSTREAM MAINS GAS PRESSURE SENSOR
1254	GAS RESERVOIR SOLENOID VALVE 1
1255	GAS RESERVOIR SOLENOID VALVE 2
1256	GAS RESERVOIR SOLENOID VALVE 3
1259	GAS SOLENOID VALVE SENSOR
1260	PREHEATER PLUG 5
1261	PREHEATER PLUG 6
1262	ELECTRONIC CONTROL UNIT OF THE GEAR SELECTION CONTROL ON THE AUTOMATIC GEARBOX
1263	AUTOMATIC GEARBOX GEAR ELECTRIC CONTROL SELECTOR
1264	GEARBOX ELECTRIC CONTROL ACTUATOR
1265	CAMSHAFT INLET SENSOR
1266	EXHAUST CAMSHAFT SENSOR
1269	SUNROOF TRAVEL END CONTACT
1270	SUNROOF RELAY
1271	SUN ROOF CONTROL UNIT
1272	CD CHANGER
1273	VIDEO CONTROL COMPUTER
1275	HEATER
1276	WATER PUMP
1278	REAR VIDEO SCREEN
1279	TELEVISION (TUNER)
1280	DVD PLAYER
1281	BRAKE LIGHT RELAY
1282	DRIVER'S FRONT ELECTROMAGNETIC REEL
1283	PASSENGER FRONT ELECTROMAGNETIC REEL
1284	RIGHT-HAND BOOT LID LIGHT
1285	LEFT-HAND BOOT LID LIGHT
1287	PARTICLE FILTER UPSTREAM TEMPERATURE SENSOR
1288	PARTICLE FILTER DOWNSTREAM TEMPERATURE SENSOR
1290	PARTICLE FILTER DIFFERENTIAL PRESSURE SENSOR
1291	OIL WEAR SENSOR
1293	TURBULENCE SOLENOID VALVE SENSOR
1294	EGR SOLENOID VALVE CONTINUOUS CURRENT
1296	ADDITIONAL CERIUM PUMP (DEPOLLUTION)
1299	TURBO TURBINE FRONT PRESSURE SENSOR
1301	EGR SOLENOID VALVE BYPASS SOLENOID VALVE
1302	BLOWN AIR TEMPERATURE SENSOR
1303	VIDEO SCREEN RETRACTION UNIT
1304	FUEL TANK LEAK DETECTION SENSOR
1305	RIGHT-HAND INLET CAMSHAFT SENSOR
1306	LEFT-HAND INLET CAMSHAFT SENSOR
1309	TRANSISTORISED COIL 1
1310	TRANSISTORIZED COIL 2

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1311	TRANSISTORISED COIL 3
1312	TRANSISTORIZED COIL 4
1313	TRANSISTORISED COIL 5
1314	TRANSISTORIZED COIL 6
1315	THROTTLE VALVE MOTOR SAFETY RELAY
1316	POWER ASSISTED STEERING PRESSURE ANALOGUE SENSOR
1318	LEFT-HAND FRONT VENT LIGHT
1319	RIGHT-HAND FRONT VENT LIGHT
1320	FRONT CENTRAL AIR VENT LIGHT
1322	TAILGATE LOCK
1323	TYRE PRESSURE SIGNAL UNIT
1324	CENTRAL REGISTRATION PLATE LIGHTING
1325	HEATING CONTROL UNIT CUT-OUT RELAY
1326	SELF-CONTAINED HEATER COOLING RELAY No. 1
1327	SELF-CONTAINED HEATER COOLING RELAY No. 2
1328	BATTERY CUT-OUT TIMER RELAY
1329	BATTERY CUT-OFF RESET CONTROL
1330	BATTERY CUT-OFF ELECTRICAL STOP RELAY
1331	ON/OFF CONTROL
1332	STEP SWITCH
1333	FOOT PANEL INDICATOR LIGHT
1334	COURTESY MIRROR LIGHT CONTROL
1335	REAR RIGHT-HAND ASHTRAY LIGHT
1336	LEFT-HAND REAR ASHTRAY LIGHT
1337	SWITCHING PROTECTION UNIT
1338	HEADLIGHT WASHER PUMP RELAY 2
1339	SIDE LIGHT DOOR SILL LIGHT RELAY
1340	INTERNAL REARVIEW MIRROR
1341	SUN ROOF BLIND MOTOR
1342	CENTRAL LOCKING RADIO FREQUENCY AERIAL
1343	KEYLESS VEHICLE BUMPER HANDS-FREE AERIAL
1344	PTC PASSENGER COMPARTMENT HEATING RESISTANCE 1
1348	EVAPORATOR RELAY
1349	CONDENSER RELAY
1350	DOOR SILL LIGHTING ANTI-RETURN DIODE 1
1351	DOOR SILL LIGHTING ANTI-RETURN DIODE 2
1352	LATERAL DOOR HANDLE LIGHT
1354	DRIVER'S FRONT FRONTAL SATELLITE
1357	PASSENGER SIDE REAR SEAT BELT FRONTAL AIRBAG
1358	PASSENGER SIDE REAR SEAT BELT FRONTAL AIRBAG
1363	DRIVER FRONT INERTIA REEL PRETENSIONER
1364	PASSENGER FRONT INERTIA REEL PRETENSIONER
1367	AUTOMATIC BATTERY ISOLATION (FUNCTIONS WITH AIR BAG)
1369	TACHOGRAPH
1371	GEARBOX TDC SENSOR
1372	REAR HEIGHT SENSOR
1373	FRONT HEIGHT SENSOR
1374	DRIVER'S DOOR HANDS-FREE CARD DETECTION AERIAL
1375	PASSENGER FRONT DOOR HANDS-FREE CARD DETECTION AERIAL
1376	DRIVER'S SIDE REAR DOOR HANDS-FREE CARD DETECTION AERIAL
1377	PASSENGER RR DOOR HANDS-FREE CARD DETECTION AERIAL
1378	TAILGATE HANDS-FREE CARD DETECTION AERIAL
1380	LONGITUDINAL ACCELEROMETER ON 4X4 VERSION

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1382	SECOND ROW ACCESSORIES INPUT
1383	THIRD ROW ACCESSORIES SOCKET
1384	BOOT ACCESSORIES INPUT
1385	STEERING WHEEL WARNING CONTROL
1386	CENTRAL GLOVEBOX SWITCH
1387	CENTRAL GLOVEBOX LIGHT
1389	ACCESSORIES RELAY NO. 2
1390	HEADLIGHT ADJUSTMENT RHEOSTAT SWITCH
1391	CENTRAL LOCKING / HAZARD WARNING LIGHTS SWITCH
1392	DRIVER'S DOOR LOCKING MICROSWITCH
1393	PASSENGER DOOR LOCKING MICRO SWITCH
1394	LEFT-HAND REAR DOOR LOCKING MICRO SWITCH
1395	RIGHT-HAND REAR DOOR LOCKING MICRO SWITCH
1396	FRONT INTERIOR HANDS-FREE CARD DETECTION AERIAL
1397	REAR INTERIOR HANDS-FREE CARD DETECTION AERIAL
1398	CENTRAL INTERIOR HANDS-FREE CARD DETECTION AERIAL
1399	SEAT FEED RELAY
1400	DRIVER'S SEATBACK MOTOR 1
1401	PASSENGER FRONT SEATBACK MOTOR 1
1402	DRIVER'S FRONT HEIGHT ADJUSTER MOTOR
1403	PASSENGER FRONT HEIGHT ADJUSTER MOTOR
1404	DRIVER'S SEAT SQUAB RUNNER MOTOR
1405	PASSENGER FRONT SEAT SQUAB RUNNER MOTOR
1406	DRIVER'S SEAT ADJUSTMENT CONTROL
1407	PASSENGER FRONT SEAT ADJUSTMENT CONTROL
1408	ROOF LIGHT FORWARD DIODE
1409	BOOT LID LOCKING MICRO SWITCH
1410	TYRE PRESSURE MONITOR FRONT LEFT-HAND AERIAL
1411	TYRE PRESSURE MONITOR FRONT RIGHT-HAND AERIAL
1412	REAR WIPER MOTOR ONE-WAY DIODE
1413	FRONT WIPER MOTOR ONE-WAY DIODE
1414	AIRBAG INHIBITOR KEY SWITCH
1415	RAIN / LIGHT SENSOR
1419	FRONT PASSENGER ROLL SENSOR B
1421	DRIVER'S SIDE REAR HEAD CURTAIN SIDE AIR BAG
1422	PASSENGER SIDE REAR HEAD CURTAIN SIDE AIR BAG
1423	LEFT-HAND COURTESY LIGHT SWITCH
1424	RIGHT-HAND COURTESY LIGHT SWITCH
1425	3RD ROW COURTESY LIGHT
1426	RIGHT-HAND 2ND ROW LATERAL LIGHTING
1427	LEFT-HAND 2ND ROW LATERAL LIGHTING
1428	PASSENGER COMPARTMENT FAN ASSEMBLY RELAY 1
1429	PASSENGER COMPARTMENT FAN ASSEMBLY RELAY 2
1432	PASSENGER COMPARTMENT DUAL FAN ASSEMBLY
1433	AIR CONDITIONING FAN ASSEMBLY 2 OUTPUT MODULE
1435	HEATER MATRIX BYPASS VALVE
1439	FRONT AIR DISTRIBUTION MOTOR
1440	PARKING AID SWITCH
1441	PASSENGER AIR BAG DISABLING KEY
1442	IGNITION COIL RELAY
1446	4X4 MODE CONTROL
1447	REAR OBSTACLE DETECTION ULTRASONIC SENSOR 1
1448	REAR OBSTACLE DETECTION ULTRASONIC SENSOR 2

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1449	REAR OBSTACLE DETECTION ULTRASONIC SENSOR 3
1450	REAR OBSTACLE DETECTION ULTRASONIC SENSOR 4
1451	CONSUMER CUT-OUT SWITCH
1455	ELECTRIC VEHICLE ELECTRIC CONTROL UNIT FILTER
1456	ONE-TOUCH DE-ICING CONTROL
1457	LPG TANK RELAY
1458	PILOT COOLANT THERMOSTAT
1460	MOTORISED EGR SOLENOID VALVE
1461	AIR INTAKE FLAP
1462	RIGHT-HAND SIDE CAMSHAFT DEPHASER
1463	LEFT-HAND SIDE CAMSHAFT DEPHASER
1464	LEFT-HAND SIDE UPSTREAM OXYGEN SENSOR
1465	RIGHT-HAND SIDE UPSTREAM OXYGEN SENSOR
1466	LEFT-HAND SIDE DOWNSTREAM OXYGEN SENSOR
1467	RIGHT-HAND SIDE DOWNSTREAM OXYGEN SENSOR
1468	DRIVER'S FRONT AIR VENT LIGHT
1469	PASSENGER FRONT AIR VENT LIGHT
1470	DRIVER'S SEATBACK HEIGHT MOTOR
1471	DRIVER'S SITE MOTOR
1472	PASSENGER SEATBACK HEIGHT MOTOR
1473	DRIVER'S SEATBACK HEIGHT ADJUSTMENT CONTROL
1474	AIR TEMPERATURE/ATMOSPHERIC PRESSURE SENSOR
1475	TURBOCHARGER CONTROL SOLENOID VALVE
1476	RIGID BONNET COMPUTER
1477	BOOT DOOR LOCKING MOTOR ON RIGHT-HAND ROOF SIDE
1478	BOOT DOOR LOCKING MOTOR ON LEFT-HAND ROOF SIDE
1479	BOOT SEPARATOR POSITION SENSOR
1480	RIGHT-HAND ROOF LOCK SENSOR
1481	LEFT-HAND ROOF LOCK SENSOR
1482	RIGID ROOF SWITCH
1484	BOOT DOOR SOLENOID VALVE
1485	RIGID ROOF SOLENOID VALVE
1486	ROOF HYDRAULIC PUMP
1487	HYDRAULIC PUMP RELAY
1488	BOOT HYDRAULIC CYLINDER SENSOR
1489	ROOF HYDRAULIC CYLINDER SENSOR
1490	GLOVEBOX LOCK MOTOR
1491	PASSENGER SEATBACK HEIGHT ADJUSTMENT CONTROL
1492	ACCESSORIES SOCKET
1497	TRAILER NOT PRESENT RESISTOR
1498	INSTRUMENT PANEL ASHTRAY LIGHT
1499	CONDENSOR ACCESSORY SOCKET
1501	ELECTRIC PARKING BRAKE STOP SWITCH
1503	PARKING BRAKE UNLOCKING SOLENOID
1507	TIMED INTERIOR LIGHT BATTERY INTERRUPTION RELAY
1511	DRIVER'S REAR TWIN ELECTRIC WINDOWS CONTROL
1512	DRIVER'S FRONT TWIN ELECTRIC WINDOWS CONTROL
1513	RIGHT-HAND HEATED SEAT CONTROL
1514	LEFT-HAND HEATED SEAT CONTROL
1515	FUEL FLAP CONTROL
1516	SUN ROOF BLIND CONTROL
1518	CONSOLE UNLOCKING MOTOR
1519	UNDER STEERING WHEEL CONTROLS

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1520	FRONT RIGHT-HAND FLAP LIGHT SWITCH
1521	FRONT LEFT-HAND FLAP LIGHT SWITCH
1522	REAR RIGHT-HAND FLAP LIGHT SWITCH
1523	REAR LEFT-HAND FLAP LIGHT SWITCH
1524	BRAKE LIGHTS ON RELAY
1525	REAR VIDEO SCREEN 2
1526	VIDEO ACCESSORIES UNIT
1529	ALTERNATOR EXCITATION DIODE
1530	ALTERNATOR EXCITATION RESISTANCE
1531	PASSENGER COMPARTMENT FUSE AND RELAY BOX 2
1532	EGR TEMPERATURE SENSOR
1533	TUMBLE SOLENOID VALVE
1534	THROTTLE VALVE MOTOR RELAY
1537	REAR SCREEN AUTOMATIC INTERFERENCE SUPPRESSOR
1538	DIESEL OXYGEN SENSOR
1539	SELF ANTI-INTERFERENCE
1540	ONE TOUCH GEAR CHANGE CONTROL ON STEERING WHEEL (LEFT HAND TO CHANGE DOWN)
1541	ONE TOUCH GEAR CHANGE CONTROL ON STEERING WHEEL (RIGHT HAND TO CHANGE UP)
1542	LPG TEMPERATURE AND PRESSURE SENSOR
1543	LEFT-HAND MOBILE ROOF ARCH CASSETTE
1544	RIGHT-HAND MOBILE ROOF ARCH CASSETTE
1545	RETURN SENSOR
1546	STEERING COLUMN HEIGHT CONTROL MODULE
1547	HEATING ELEMENT BLOCK
1548	DRIVER'S ANTI-SUBMARINING AIRBAG (ANTI-SLIDE CUSHION)
1549	FRONT PASSENGER ANTI-SUBMARINING AIRBAG (ANTI-SLIDE CUSHION)
1550	ADDITIONAL HEATER UNIT INTERFACE
1551	GPS NAVIGATION AERIAL
1552	AIR SUSPENSION CONTROL
1553	AIR SUSPENSION SYSTEM
1555	RIGHT-HAND ROOF LIGHT
1556	LEFT-HAND ROOF LIGHT
1557	RIGHT-HAND MARKER LIGHT
1558	LEFT-HAND MARKER LIGHT
1559	REVERSE GEAR BUZZER INHIBITION SWITCH
1560	CRUISE CONTROL/STOP/FAST IDLE SPEED CONTROL
1561	CRUISE CONTROL RESUME/SUSPEND SWITCH
1562	FLAP LOCK (DOOR IN THE TAILGATE)
1563	TRACTION CONTROL (ASR) ON/OFF SWITCH
1566	VACUUM PUMP RELAY
1567	POWER TAKE-OFF
1572	RIGHT-HAND INJECTION AIR FLOWMETER
1574	MAIN BEAM HEADLIGHTS RELAY
1576	PASSENGER SENSOR
1578	SUNROOF MOTOR
1579	SUN ROOF CONTROL UNIT
1580	AUXILIARY HEATER 2 RELAY CONTROL UNIT
1581	AUXILIARY AIR CONDITIONING UNIT
1583	REAR BUMPER HANDS-FREE CARD DETECTION AERIAL
1584	REAR HANDS-FREE CARD DETECTION AERIAL 2
1585	ALTERNATOR OPTO RELAY (ELECTRONIC POWER CUT RELAY)
1586	ALTERNATOR EXCITATION DIODE 2
1587	UPSTREAM OXYGEN SENSOR

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1588	DOWNSTREAM OXYGEN SENSOR
1589	TURBO UPSTREAM TEMPERATURE SENSOR
1590	REVERSE INDICATOR LIGHT
1591	POWER TAKE-OFF SWITCH
1592	DIFFERENTIAL LOCK SENSOR
1594	FUEL FILTER CLOGGING SENSOR
1595	CUP HOLDER LIGHT
1596	BODYWORK OPTION CONNECTION (FREE FOR SPECIAL ADAPTATION)
1597	DRIVER'S SIDE FRONT SPEAKER
1598	PASSENGER SIDE FRONT SPEAKER
1599	REAR SCREEN CAPACITOR
1600	TURBOCHARGER SHORT CIRCUIT SOLENOID VALVE
1601	SEAT BELT WARNING MODULE
1602	VARIABLE EXHAUST CAMSHAFT
1603	VARIABLE CAMSHAFT INLET
1609	DOOR LOCKING OFFSET AERIAL
1610	TELEPHONE HOLDER
1612	GEAR CHANGE CONTROL ON STEERING WHEEL
1614	FIXED CORNERING LIGHTS ELECTRIC CONTROL UNIT
1615	INTERNAL COMBUSTION ENGINE RUNNING + RELAY
1616	INTERNAL COMBUSTION ENGINE RUNNING + RELAY 2
1617	HEATER THERMOSTAT
1618	TRANSPONDER RING
1619	PASSENGER COMPARTMENT FUSE AND RELAY BOX 3
1620	FRONT LEFT-HAND SIDE SATELLITE (IMPACT SENSOR)
1621	FRONT RIGHT-HAND SIDE SATELLITE (IMPACT SENSOR)
1623	LEFT-HAND SIDE CURTAIN AIRBAG
1624	RIGHT-HAND SIDE CURTAIN AIRBAG
1625	FRONT LEFT-HAND INERTIA REEL PRETENSIONER
1626	FRONT RIGHT-HAND INERTIA REEL PRETENSIONER
1627	REAR LEFT-HAND INERTIA REEL PRETENSIONER
1628	REAR RIGHT-HAND INERTIA REEL PRETENSIONER
1629	ECONOMY MODE CONTROL
1634	FRONT LEFT-HAND EXTERIOR PARKING PROXIMITY DETECTOR SENSOR
1635	FRONT LEFT-HAND INTERIOR PARKING PROXIMITY DETECTOR SENSOR
1636	FRONT RIGHT-HAND EXTERIOR PARKING PROXIMITY DETECTOR SENSOR
1637	FRONT RIGHT-HAND INTERIOR PARKING PROXIMITY DETECTOR SENSOR
1638	PARKING PROXIMITY SENSOR FRONT BUZZER
1639	AUXILIARY FUEL PUMP RELAY
1640	AUXILIARY FUEL TANK SOLENOID VALVE
1642	POLICE EQUIPMENT SOCKET
1643	POLICE LIGHT SOCKET PANEL
1645	DRIVER'S SEAT BASE HEATING PANEL (SEAT)
1646	DRIVER'S SEATBACK HEATING PANEL (SEAT)
1647	PASSENGER SEAT BASE HEATING PANEL (SEAT)
1648	PASSENGER SEATBACK HEATING PANEL (SEAT)
1649	DRIVER'S HEATED SEAT SUPPLY RELAY
1650	PASSENGER HEATED SEAT SUPPLY RELAY
1652	DRIVER'S INTERIOR OPENING CONTROL LIGHT
1653	FRONT PASSENGER INTERIOR OPENING CONTROL LIGHT
1654	REAR LEFT-HAND INTERIOR OPENING CONTROL LIGHT
1655	REAR RIGHT-HAND INTERIOR OPENING CONTROL LIGHT
1656	BOOT LID LIGHT

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1657	MULTIMEDIA KEYPAD
1661	AUTOMATIC GEARBOX EVEN PRIMARY SPEED SENSOR
1662	AUTOMATIC GEARBOX ODD PRIMARY SPEED SENSOR
1663	4-WHEEL STEER ELECTRIC CONTROL UNIT
1664	SPECIAL FEATURES SUPPLEMENTARY CONVERSION UNIT
1667	MULTIPLEX DOOR INFORMATION DISPLAY CONTROL
1669	FRONT RIGHT FLOOR LIGHT
1674	PASSENGER REAR EXTERIOR OPENING CONTROL LIGHT
1675	DRIVER'S REAR EXTERIOR OPENING CONTROL LIGHT
1679	CENTRAL REAR SEAT BELT BUCKLE SWITCH
1682	GAS EXPANSION SOLENOID VALVE RELAY
1683	OPTIONAL RELAY UNIT
1684	AIR INTAKE TUMBLE MOTOR
1685	LEFT-HAND LIGHT ON LUGGAGE COMPARTMENT LID
1686	RIGHT-HAND LIGHT ON LUGGAGE COMPARTMENT LID
1687	INTEGRATED FRONT RADAR AND CAMERA
1690	DRIVER'S FRONT PELVIC CHEST SIDE AIRBAG
1699	ELECTRICAL NETWORK FILTERING CAPACITOR
1700	DOWNSTREAM LAMBDA OXYGEN SENSOR
1701	ANTI-PINCH SEAL 1
1702	ANTI-PINCH SEAL 2
1705	TAILGATE BUZZER
1707	INTERIOR CLOSING CONTROL
1709	TURBULENCE SOLENOID VALVE SENSOR 2
1710	FUEL PUMP DIODE
1713	FRONT EXTERIOR HANDS-FREE CARD DETECTION AERIAL
1714	MULTIPLEX LINE INTERFACE UNIT (MULTIPLEXING)
1715	TAILGATE UNLOCKING RELAY
1716	INSTRUMENT PANEL HANDS-FREE CARD DETECTOR AERIAL
1717	REAR SCREEN CAPACITOR 2
1722	GEARBOX SECONDARY SPEED SENSOR
1724	GEARBOX PRIMARY SPEED SENSOR
1726	SELECTION POSITION SENSOR
1732	REAR LEFT-HAND BOOT LID LIGHT
1733	TAILGATE LOCKING SWITCH
1734	DOWNSTREAM AIR PRESSURE/TEMPERATURE SENSOR
1735	CATALYTIC CONVERTER UPSTREAM TEMPERATURE SENSOR
1738	HEATING AND AIR CONDITIONING SYSTEM CONTROL, CENTRAL DOOR LOCKING, WARNING
1739	REAR AIR CONDITIONING CONTROL
1741	3-5 SYNCHRONISER CONTROL
1744	TURBO UPSTREAM EXHAUST PRESSURE SENSOR
1747	AIR FLAP UPSTREAM TURBOCHARGER PRESSURE SENSOR
1749	TURBOCHARGER UPSTREAM EXHAUST TEMPERATURE SENSOR
1750	INJECTION SOLENOID VALVE AT EXHAUST
1751	AMBIENT LIGHTING DRIVER'S DOOR
1752	AMBIENT LIGHTING FRONT PASSENGER DOOR
1753	DASHBOARD AMBIENT LIGHTING
1754	DASHBOARD CONSOLE AMBIENT LIGHTING
1757	FRONT RIGHT-HAND DAYTIME RUNNING LIGHT
1758	FRONT LEFT-HAND DAYTIME RUNNING LIGHT
1759	CLUTCH END OF TRAVEL SWITCH
1760	TIMED BATTERY CUT OFF +RELAY 1 (FUNCTION POWER CUT OFF DURING START PHASE)
1761	TIMED BATTERY CUT OFF + RELAY 2

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1762	TIMED BATTERY NOT CUT OFF +RELAY (NO FUNCTION POWER CUT OFF DURING START PHASE)
1763	ADDITIONAL BATTERY
1764	TRACTION CONTROL SWITCH LOAD MODE
1765	CATALYTIC CONVERTER DOWNSTREAM TEMPERATURE SENSOR
1766	EXHAUST FUEL PRESSURE REGULATOR
1767	FUEL PUMP EXHAUST
1768	FUEL PUMP EXHAUST RELAY
1771	FRONT LEFT-HAND DOOR ELECTRIC LOCKING
1772	FRONT RIGHT-HAND DOOR ELECTRIC LOCKING
1773	HEATING ELEMENT RELAY NUMBER 1 CONTROL
1774	HEATING ELEMENT RELAY NUMBER 2 CONTROL
1775	HEATING ELEMENT RELAY NUMBER 3 CONTROL
1776	SOCKET (AFTER-SALES)
1777	SCREEN PRINTED RADIO AERIAL (INTEGRATED IN REAR SCREEN)
1778	REAR CAMERA
1779	REAR CAMERA CENTRAL UNIT
1780	AFTER IGNITION SLAVE RELAY
1781	INTERIOR LIGHTS
1783	RIGHT-HAND DOOR STRIKER PANEL
1786	FRONT LEFT-HAND SIDE DOOR CONTROL
1787	FRONT RIGHT-HAND SIDE DOOR CONTROL
1788	REAR RIGHT-HAND SIDE DOOR CONTROL
1789	REAR LEFT-HAND SIDE DOOR CONTROL
1790	LEFT-HAND SLIDING SIDE DOOR CENTRAL UNIT
1791	RIGHT-HAND SLIDING SIDE DOOR CENTRAL UNIT
1792	FUSE HOLDER 1 MODULE
1793	FUSE HOLDER MODULE 2
1794	FUSE HOLDER MODULE 3
1797	BATTERY RECONNECTION BORNIER
1799	FRONT LEFT-HAND SEAT BELT SWITCH
1800	FRONT RIGHT-HAND SEAT BELT SWITCH
1801	REAR LEFT-HAND SEAT BELT SWITCH
1802	REAR RIGHT-HAND SEAT BELT SWITCH
1803	FRONT LEFT-HAND LAP BELT PRETENSIONER
1804	FRONT RIGHT-HAND LAP BELT PRETENSIONER
1805	FRONT LEFT-HAND BUCKLE PRETENSIONER
1806	FRONT RIGHT-HAND BUCKLE PRETENSIONER
1809	REAR LEFT-HAND SIDE CHEST-LEVEL AIRBAG
1810	REAR RIGHT-HAND SIDE CHEST-LEVEL AIRBAG
1811	FRONT LEFT-HAND ACTIVE ANTI-SUBMARINING (ANTI-SLIDE CUSHION)
1812	FRONT RIGHT-HAND ACTIVE ANTI-SUBMARINING (ANTI-SLIDE CUSHION)
1813	LEFT-HAND SIDE SATELLITE (AIR BAG)
1814	RIGHT-HAND SIDE SATELLITE (AIR BAG)
1822	FRONT LEFT-HAND PELVIC CHEST SIDE AIRBAG
1823	FRONT RIGHT-HAND PELVIC CHEST SIDE AIRBAG
1826	STOP/START COMPUTER
1827	ENGINE FAN ASSEMBLY RELAY 2 FOR OPERATION IN PARALLEL
1828	ENGINE FAN ASSEMBLY RELAY 1 FOR OPERATION IN PARALLEL
1829	ENGINE FAN ASSEMBLY RELAY 1 FOR OPERATION IN SERIES
1831	ENGINE FAN ASSEMBLY RELAY FOR OPERATION IN PARALLEL SERIES
1832	3RD ROW DRIVER'S SIDE REAR INERTIA REEL PRETENSIONER
1833	3RD ROW PASSENGER'S SIDE REAR INERTIA REEL PRETENSIONER
1834	ENGINE FUSE BOX

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1835	CENTRAL SPEAKER
1836	DRIVER'S FRONTAL AIRBAG
1837	AUDIBLE WARNING RELAY
1838	AUDIBLE WARNING
1839	ENGINE FAN UNIT CONTROL RELAY UNIT
1840	EVAPORATOR SAFETY MODULE
1841	POWER FEED FUSE RACK NO. 2
1842	PARKING DISTANCE CONTROL/ESP ON/OFF CONTROL
1843	ADDITIONAL HEATER RELAY
1844	REAR HEATING/AIR CONDITIONING SYSTEM CONTROL PANEL
1845	SUNROOF BLIND MOTOR CONTROL
1847	ENGINE FUSE BOX 2
1848	4 WHEEL DRIVE ACTUATOR
1849	ADDITIONAL 2 HEATER RELAY 2
1850	DRIVER ELECTRIC WINDOW SHORT DOWN/UP SWITCH
1851	PASSENGER ELECTRIC WINDOW SHORT DOWN/UP SWITCH
1852	AIR CONDITIONING RELAY PLATE 2
1853	DRIVER'S HEATED SEAT CONTROL UNIT
1854	PASSENGER'S HEATED SEAT CONTROL UNIT
1855	LOW SPEED FAN ASSEMBLY RELAY
1856	ENGINE COOLING FAN ASSEMBLY HIGH SPEED RELAY
1863	LEFT-HAND SIDE DOOR MOTOR
1864	RIGHT-HAND SIDE DOOR MOTOR
1865	TRANSMITTER ALARM ULTRASONIC SENSOR (TX)
1866	DIESEL FUEL HEATER WITH COOLANT SENSOR
1867	POWER-ASSISTED STEERING PUMP ASSEMBLY NO. 2 RELAY
1868	RIGHT-HAND SIDE DOOR PISTON CONTACTS
1869	LEFT-HAND SIDE DOOR PISTON CONTACTS
1870	PASSENGER REMOTE MOTOR
1871	GEARBOX OIL TEMPERATURE SENSOR
1872	PASSENGER COMPARTMENT TEMPERATURE SENSOR
1873	NEGATIVE BATTERY TERMINAL
1874	MULTIFUNCTION AERIAL
1876	SPEAKER (BASS SECTION)
1877	MULTIMEDIA ACCESSORIES SOCKET
1878	CLUTCH PRESSURE SENSOR 2
1879	SCREEN PRINTED RADIO AERIAL 2
1880	WIRED RADIO AERIAL
1881	REAR DOOR SCREEN WIPER MOTOR
1882	COVER ELECTRIC WINDOW CONTROL (BOOT LID)
1883	REAR DOOR ELECTRIC LOCKING
1884	REAR DOOR OPENING ACTUATOR
1885	ROOF FLAP STATUS SWITCH
1886	HEATED REAR WINDOW ANTI-INTERFERENCE FILTER
1887	HEATED REAR WINDOW ANTI-INTERFERENCE FILTER 2
1888	FRONT RIGHT-HAND OPPOSING WINDSCREEN WIPER MOTOR
1889	FRONT LEFT-HAND OPPOSING WINDSCREEN WIPER MOTOR
1890	INJECTOR 5 CUT-OFF SOLENOID VALVE
1892	REAR RIGHT-HAND AUTOMATIC PARKING BRAKE MOTOR
1893	REAR LEFT-HAND AUTOMATIC PARKING BRAKE MOTOR
1895	433 MHZ RF AERIAL
1896	REAR DOOR ELECTRIC WINDOW MOTOR
1900	SEAT BELT SWITCH SECOND ROW CENTRE RED

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1906	RED REAR LEFT-HAND 3RD ROW SEATBELT SWITCH
1907	AERIAL CONNECTION UNIT
1909	EGR DIFFERENTIAL PRESSURE SENSOR
1910	PARTICLE FILTER DOWNSTREAM FLAP
1911	CATALYTIC CONVERTER UPSTREAM TEMPERATURE SENSOR 2
1912	INJECTOR PLATE
1915	EGR COOLANT PUMP
1916	GAS RESERVOIR EVAPORATION PRESSURE SENSOR
1917	AUDIO AMPLIFIER
1918	RIGHT-HAND SUBWOOFER SPEAKER
1919	LEFT-HAND SUBWOOFER SPEAKER
1920	OPENING ELEMENT WARNING SOUND UNIT (WAC)
1921	AERIAL 2 AMPLIFIER
1922	RIGHT-HAND ADDITIONAL HEADLIGHT
1923	LEFT-HAND ADDITIONAL HEADLIGHT
1926	WINDSCREEN WIPER DE-ICER
1927	STEERING WHEEL HORN CONTROL 2
1928	FIRST ROW ACCESSORIES SOCKET 2
1929	EGR COOLANT TEMPERATURE SENSOR
1930	LUGGAGE COMPARTMENT OPENING INTERNAL CONTROL
1932	RIGHT-HAND DASHBOARD AMBIENT LIGHTING
1933	LEFT-HAND DASHBOARD AMBIENT LIGHTING
1934	RIGHT-HAND DASHBOARD CONSOLE AMBIENT LIGHTING
1935	LEFT-HAND DASHBOARD CONSOLE AMBIENT LIGHTING
1936	DRIVER'S MODULE (INSTRUMENT PANEL CONTROL)
1940	REAR RIGHT-HAND SEATBELT REEL
1941	REAR LEFT-HAND SEATBELT REEL
1942	REAR CENTRAL SEATBELT REEL
1943	GEARBOX SECONDARY SPEED SENSOR
1944	CENTRE REAR ANCHORAGE BUCKLE SWITCH
1946	RIGHT-HAND 3RD ROW BUCKLE SWITCH
1947	LEFT-HAND 3RD ROW BUCKLE SWITCH
1948	RIGHT-HAND FOG LIGHT/DAYTIME RUNNING LIGHT
1949	LEFT-HAND FOG LIGHT/DAYTIME RUNNING LIGHT
1950	DAYTIME RUNNING LIGHT RELAY
1951	230 VOLT SOCKET
1957	CONSOLE UNLOCKING CONTROL
1959	MULTIMEDIA AUDIO SOCKET (C BOX)
1960	REAR RIGHT-HAND DOOR CLOSING ASSISTANCE ELECTRICAL CONTROL UNIT
1961	REAR LEFT-HAND DOOR CLOSING ASSISTANCE ELECTRICAL CONTROL UNIT
1962	REAR RIGHT-HAND DOOR CONTROL PANEL
1963	REAR LEFT-HAND DOOR CONTROL PANEL
1964	REAR RIGHT-HAND DOOR BUZZER
1965	REAR LEFT-HAND DOOR BUZZER
1966	SLIDING DOOR ON/OFF CONTROL
1967	FUEL FLAP SWITCH
1968	SUNROOF FRONT RAIL
1969	SUNROOF REAR RAIL
1970	WIRED AERIAL AMPLIFIER
1971	TRAILER SOCKET SWITCHING MODULE
1975	1ST GEAR ENGAGED SWITCH
1976	STOP SWITCH 2
1977	REAR FOG LIGHT

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1978	LEVEL SENSOR (VEHICLE TILT)
1979	HIGH-PITCHED HORN
1980	LOW-PITCHED HORN
1981	SEATBELT ELECTRONIC CONTROL UNIT
1982	TYRE PRESSURE MONITOR REAR RIGHT-HAND AERIAL
1983	TYRE PRESSURE MONITOR REAR LEFT-HAND AERIAL
1984	ELECTRIC WINDOW THERMAL PROTECTION 1
1985	ELECTRIC WINDOW THERMAL PROTECTION 2
1986	IMMOBILISER ELECTRIC CONTROL UNIT
1987	WOOFER SPEAKER (BASS)
1988	ENGINE FAN ASSEMBLY 2 RELAY
1989	PARTICLE FILTER RELATIVE PRESSURE SENSOR
1990	INLET CONTROL SOLENOID VALVE
1992	REAR HANDS-FREE CARD DETECTION EXTERNAL AERIAL
1993	LEVEL/TEMPERATURE SENSOR / FUEL PUMP
1994	FRONT AIR DISTRIBUTION MOTOR 2
1995	REAR MIXING MOTOR (AIR)
1997	BLOWN AIR SENSOR
1998	REAR AIR CONDITIONING FAN ASSEMBLY POWER MODULE
1999	REAR PASSENGER COMPARTMENT FAN ASSEMBLY
2000	RIGHT-HAND SURROUND SPEAKER
2001	LEFT-HAND SURROUND SPEAKER
2002	INVERTER ON/OFF CONTROL
2003	HANDS-FREE ACCESS ELECTRIC CONTROL UNIT
2004	PASSENGER REAR SEAT ACCESS CONTROL UNIT
2005	DRIVER'S REAR SEAT ACCESS COMPUTER
2006	PASSENGER REAR SEAT ACCESS MOTOR
2007	DRIVER'S REAR SEAT ACCESS MOTOR
2008	PASSENGER REAR SEAT ACCESS SENSOR
2009	DRIVER'S REAR SEAT ACCESS SENSOR
2011	LPG RAIL PRESSURE SENSOR
2012	LPG RAIL TEMPERATURE SENSOR
2013	LPG PUMP MODULE
2014	LPG PUMP MODULE RELAY
2015	LPG CIRCUIT CONTROL
2017	FRONT/REAR TORQUE DISTRIBUTOR COMPUTER
2018	PUMP FILTER LPG CUT-OFF SOLENOID VALVE
2019	LPG RAIL CUT-OFF SOLENOID VALVE
2020	3RD ROW REAR RIGHT-HAND INERTIA REEL PRETENSIONER
2021	3RD ROW REAR LEFT-HAND INERTIA REEL PRETENSIONER
2024	2ND ROW REAR RIGHT-HAND PASSENGER PRESENCE SENSOR
2025	2ND ROW REAR LEFT-HAND PASSENGER PRESENCE SENSOR
2028	GRADIENT CONTROL (UP/DOWN) ON/OFF SWITCH
2032	TELEVISION AERIAL 1
2034	FLOOR ELECTRIC CONTROL UNIT RIGHT-HAND SEAT INDUCTIVE CONNECTION
2035	FLOOR CONTROL UNIT LEFT-HAND SEAT INDUCTIVE CONNECTION
2036	FLOOR CONTROL UNIT CENTRE SEAT INDUCTIVE CONNECTION
2037	REMOTE SELF-ADAPTING REGULATOR CONTROL UNIT
2038	TIMED 12 V BATTERY NOT CUT OFF + RELAY 2
2039	ALTERNATING 230 VOLT SOCKET INVERTER
2041	4X4 SOLENOID VALVE
2044	PARCEL SHELF MOTOR (ROOF COVER)
2046	RIGHT-HAND LUGGAGE COMPARTMENT ROOF LOCK SENSOR

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
2047	LEFT-HAND LUGGAGE COMPARTMENT ROOF LOCK SENSOR
2049	ROOF HYDRAULIC SYSTEM
2050	AIR QUALITY CONTROL PANEL
2051	IONISER CONTROL PANEL
2052	IONISER MODULE
2053	FRAGRANCE MODULE (SCENT)
2054	REAR RIGHT-HAND SLIDING DOOR LOCK
2055	REAR LEFT-HAND SLIDING DOOR LOCK
2056	REAR RIGHT-HAND DOOR OPENING ACTUATOR
2057	REAR LEFT-HAND DOOR OPENING ACTUATOR
2058	PETROL VAPOUR CIRCUIT BYPASS SOLENOID VALVE (HYDROCARBON REDUCTION SYSTEM)
2059	MOBILE PHONE HEADSET SOCKET
2060	SWIRL FLAP (MIXING)
2061	VIDEO SOCKET 1
2062	VIDEO SOCKET 2
2064	REAR ELECTRIC BLIND
2065	SUNROOF CURTAIN OPENING CONTROL
2066	SUNROOF CURTAIN CLOSING CONTROL
2067	REAR ELECTRIC BLIND CONTROL
2068	REAR VIEW MIRROR ANTI-RETURN DIODE
2069	RIGHT-HAND PARCEL SHELF SENSOR + MOTOR
2070	LEFT-HAND PARCEL SHELF SENSOR + MOTOR
2071	LOCKABLE ROOF SENSOR
2072	ROOF HYDRAULIC CYLINDER INTERMEDIATE POSITION SENSOR
2073	RIGHT-HAND LUGGAGE COMPARTMENT DOOR LOCK MECHANISM SENSOR
2074	LEFT-HAND LUGGAGE COMPARTMENT DOOR LOCK MECHANISM SENSOR
2075	RIGHT-HAND LUGGAGE COMPARTMENT DOOR MECHANISM SENSOR
2076	LEFT-HAND LUGGAGE COMPARTMENT DOOR MECHANISM SENSOR
2077	TYRE PRESSURE MONITOR TYRE PRESSURE AUTOMATIC TEST SYSTEM
2078	ADDITIONAL HEATER BURNER MOTOR
2079	ADDITIONAL HEATER OVERHEATING DETECTOR
2080	ADDITIONAL HEATER TEMPERATURE SENSOR
2081	ADDITIONAL HEATER FLAME DETECTOR
2082	ADDITIONAL HEATER TEMPERATURE SWITCH
2083	ANTI-LIFT (VEHICLE) ALARM SENSOR
2084	AIR CONDITIONING COOLANT PUMP
2085	REAR DOOR LOCKING CENTRAL UNIT
2086	NETWORK STABILISER CENTRAL UNIT
2087	OIL PUMP SOLENOID VALVE
2088	REAR LEFT-HAND HANDS-FREE CARD DETECTION AERIAL
2089	REAR RIGHT-HAND HANDS-FREE CARD DETECTION AERIAL
2090	REAR RIGHT-HAND SIDE CURTAIN AIRBAG
2091	REAR LEFT-HAND SIDE CURTAIN AIRBAG
2092	ELECTRONIC POWER UNIT
2093	BATTERY CHARGER UNIT
2095	SPORT MODE CONTROL
2096	REAR LEFT-HAND VIDEO SCREEN
2097	REAR RIGHT-HAND VIDEO SCREEN
2098	REAR ARMREST PLATE
2099	STOP AND START SWITCH
2101	HEATER COMPUTER
2102	FAST IDLE SPEED CONTROL
2106	SIDE PASSENGER BUCKLE FRONT INERTIA REEL

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
2107	CENTRE PASSENGER BUCKLE FRONT INERTIA REEL
2108	CENTRE PASSENGER BUCKLE FRONT PRETENSIONER
2109	LOW PRESSURE EGR SOLENOID VALVE FLAP
2111	ENGINE BYPASS SOLENOID VALVE
2115	EXHAUST EVAPORATOR METERING VALVE
2116	EXHAUST FLAP
2117	DRIVER'S MASSAGE SEAT COMPUTER
2118	DRIVER'S MASSAGE PUMP
2119	DRIVER'S SEAT MASSAGE CONTROL
2120	REAR LEFT-HAND HEATED SEAT CONTROL
2121	REAR RIGHT-HAND HEATED SEAT CONTROL
2124	ELECTRIC COOLANT PUMP 2
2125	FIRST ROW COURTESY LIGHT
2126	2ND ROW COURTESY LIGHT
2128	DRIVER SENSOR
2129	PASSENGER COMPARTMENT HEATING COMPUTER
2130	AIR CONDITIONING COMPRESSOR
2131	TAXIMETER
2132	REAR RIGHT-HAND QUARTER PANEL RADIO AERIAL
2133	REAR LEFT-HAND QUARTER PANEL RADIO AERIAL
2134	LEFT-HAND HEATED REAR SCREEN
2135	RIGHT-HAND HEATED REAR SCREEN
2138	ELECTRIC VEHICLE BUZZER
2139	ELECTRIC VEHICLE BUZZER CONTROL
2140	NETWORK STABILISER CENTRAL UNIT 2
2142	FRONT RIGHT-HAND SIDE LIGHT
2143	REAR RIGHT-HAND SIDE LIGHT
2144	INTERMEDIATE RIGHT-HAND SIDE LIGHT 1
2146	FRONT LEFT-HAND SIDE LIGHT
2147	REAR LEFT-HAND SIDE LIGHT
2148	INTERMEDIATE LEFT-HAND SIDE LIGHT 1
2150	VACUUM PUMP CONTROL MODULE
2152	TELEMATIC COMPUTER
2153	UREA INJECTOR
2154	UREA HEATER PUMP MOTOR
2155	UREA PIPE HEATER
2157	UREA INJECTION ELECTRONIC CONTROL UNIT
2158	UREA INJECTION ELECTRONIC CONTROL UNIT RELAY
2159	UPSTREAM NOX SENSOR
2160	DOWNSTREAM NOX SENSOR
2165	EXHAUST TEMPERATURE SENSOR
2166	AUXILIARY FUEL TANK INJECTOR
2170	3/5 SELECTION POSITION SENSOR
2171	WARM MODE AIR CONDITIONING CONTROL
2172	COLD MODE AIR CONDITIONING CONTROL
2173	REAR LEFT-HAND SEAT HEATED PAD
2174	REAR RIGHT-HAND SEAT HEATED PAD
2175	REAR LEFT-HAND SEAT SUPPLY RELAY
2176	REAR RIGHT-HAND SEAT SUPPLY RELAY
2177	REAR LEFT-HAND SEAT ADJUSTMENT MOTOR
2178	REAR RIGHT-HAND SEAT ADJUSTMENT MOTOR
2179	CLUTCH ACTUATOR SENSOR 1
2180	CLUTCH ACTUATOR SENSOR 2

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
2181	CLUTCH ACTUATOR SENSOR 2
2182	BATTERY 1 LOCKING SWITCH
2183	BATTERY 2 LOCKING SWITCH
2184	BATTERY 3 LOCKING SWITCH
2185	BATTERY 4 LOCKING SWITCH
2186	ANTI-THEFT TRACKER UNIT
2189	RAPID CHARGING PLUG
2191	MINIMUM FUEL LEVEL SENSOR
2192	SOLENOID VALVE OF THE DEGASSING TANK FOR THE ENGINE COOLING SYSTEM
2197	REGENERATIVE BRAKE COMPUTER
2198	INJECTION WATER TEMPERATURE SENSOR 2
2201	ENGINE COOLING FAN ASSEMBLY VERY LOW SPEED RESISTOR
2202	ENERGY MANAGEMENT COMPUTER
2203	FRONT LEFT-HAND DOOR HANDS-FREE CARD DETECTION AERIAL
2204	FRONT RIGHT-HAND DOOR HANDS-FREE CARD DETECTION AERIAL
2205	ENGAGEMENT ACTUATOR 2/4
2206	ENGAGEMENT ACTUATOR 3/5
2207	ENGAGEMENT POSITION SENSOR 2/4
2209	FRONT LEFT-HAND CHARGING SOCKET
2210	FRONT RIGHT-HAND CHARGING SOCKET
2212	JUNCTION BOX
2213	POWER TAKE-OFF (MOVEMENT) ELECTRIC CONTROL UNIT
2214	THERMAL MANAGEMENT SOLENOID VALVE
2216	BATTERY COOLING SYSTEM CONTROL
2217	TRACTION BATTERY COOLING SYSTEM RELAY 1
2220	BATTERY COOLING SYSTEM
2225	SPEED LIMITER ON/OFF CONTROL
2227	FUEL PUMP CONTROL MODULE
2228	COOLANT CUT-OFF SOLENOID VALVE
2230	RIGHT-HAND ELECTRIC DOOR MIRROR
2231	LEFT-HAND ELECTRIC DOOR MIRROR
2232	ENGINE HEATING FLAP
2235	ELECTRIC VEHICLE BATTERY + RELAY
2236	FRONT CAMERA CENTRE UNIT
2237	FRONT CAMERA ON/OFF CONTROL
2238	TRACTION BATTERY MODULE 1
2239	TRACTION BATTERY MODULE 2
2240	TRACTION BATTERY MODULE 3
2241	TRACTION BATTERY MODULE 4
2242	TRACTION BATTERY MODULE 5
2243	TRACTION BATTERY MODULE 6
2244	TRACTION BATTERY MODULE 7
2245	TRACTION BATTERY MODULE 8
2246	TRACTION BATTERY MODULE 9
2247	TRACTION BATTERY MODULE 10
2248	TRACTION BATTERY MODULE 11
2249	TRACTION BATTERY MODULE 12
2250	TRACTION BATTERY MODULE 13
2251	TRACTION BATTERY MODULE 14
2252	TRACTION BATTERY MODULE 15
2253	TRACTION BATTERY MODULE 16
2254	TRACTION BATTERY MODULE 17
2255	TRACTION BATTERY MODULE 18

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
2256	TRACTION BATTERY MODULE 19
2257	TRACTION BATTERY MODULE 20
2258	TRACTION BATTERY MODULE 21
2259	TRACTION BATTERY MODULE 22
2260	TRACTION BATTERY MODULE 23
2261	TRACTION BATTERY MODULE 24
2268	TRACTION BATTERY INVERTER MODULE 5
2285	TRACTION BATTERY INVERTER MODULE 22
2286	TRACTION BATTERY COMPUTER
2287	TRACTION BATTERY SWITCH
2288	TRACTION BATTERY HIGH VOLTAGE + RELAY
2289	TRACTION BATTERY HIGH VOLTAGE - RELAY
2291	TRACTION BATTERY TEMPERATURE SENSOR 1
2295	HEAT PUMP CONTROL UNIT
2297	CHARGING SOCKET LOCK
2298	CHARGING FLAP CONTROL
2299	CHARGING FLAP SWITCH
2300	LEFT-HAND REAR SCREEN WIPER MOTOR
2301	RIGHT-HAND REAR SCREEN WIPER MOTOR
2303	GAS SYSTEM
2304	POWER TAKE-OFF RELAY
2307	UREA UPSTREAM TEMPERATURE SENSOR
2309	LOW PRESSURE TURBOCHARGER DISCHARGE VALVE SOLENOID VALVE
2310	BYPASS SOLENOID VALVE OF THE HIGH-PRESSURE TURBINE
2311	HIGH PRESSURE COMPRESSOR BYPASS SOLENOID VALVE
2312	ALTERNATOR STARTER
2313	RETRACTABLE SUNROOF ELECTRIC CONTROL UNIT
2317	ETHANOL SENSOR
2318	BATTERY COOLING MOTOR
2319	HEAT PUMP SOLENOID VALVE
2320	COMPRESSOR TEMPERATURE SENSOR
2321	HEAT PUMP EXCHANGER TEMPERATURE SENSOR
2322	RIGHT-HAND SIDE LIGHT/DAYTIME RUNNING LIGHT
2323	LEFT-HAND SIDE LIGHT/DAYTIME RUNNING LIGHT
2324	TRACTION BATTERY CHARGE CONTROL UNIT
2325	POWER ELECTRIC CONTROL MODULE
2326	GEARBOX LONGITUDINAL ACCELERATION SENSOR
2327	GEARBOX OIL PUMP
2328	GEARBOX OIL PUMP RELAY
2329	REAR RIGHT-HAND INDICATOR LIGHT
2330	REAR LEFT-HAND INDICATOR LIGHT
2332	SECOND INJECTOR 1
2333	SECOND INJECTOR 2
2334	SECOND INJECTOR 3
2335	SECOND INJECTOR 4
2340	STEERING COLUMN SWITCHES INTERFACE UNIT
2341	CENTRAL DOOR LOCKING RELAY
2342	DRIVER'S DOOR ELECTRIC LOCKING DEACTIVATION RELAY
2343	USB SOCKET
2344	USB SOCKET 2
2345	TURBO AIR COOLING WATER PUMP
2348	TRACTION BATTERY COOLING SOLENOID VALVE
2349	TRACTION BATTERY COOLING SOLENOID VALVE 2

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
2350	TRACTION BATTERY HEATING RELAY 1
2351	TRACTION BATTERY HEATING RELAY 2
2353	TRACTION BATTERY HEATING
2354	REAR RIGHT-HAND SEAT STOP CONTROL
2355	REAR LEFT-HAND SEAT STOP CONTROL
2356	PASSENGER SEAT ACCESS CONTROL
2357	PASSENGER SEAT ACCESS RELAY
2360	RIGHT-HAND DOOR MIRROR CONTROL UNIT
2361	TAILGATE CONTROL IN AUTOMATIC MODE
2362	TAILGATE CONTROL BY THE DRIVER
2363	TAILGATE ACTUATOR
2364	TAILGATE ACTUATOR 2
2366	MULTIMEDIA MICROPHONE
2367	MULTIMEDIA MICROPHONE 2
2368	MULTIMEDIA MICROPHONE 3
2371	DISCHARGE VALVE FLAP
2372	AUTOMATIC GEARBOX PARKING FINGER ACTUATOR
2373	FRONT COLLISION ALERT RADAR
2375	TRACTION BATTERY CHARGE RELAY
2376	DRIVING MODE CONTROL
2378	BLIND SPOT WARNING CONTROL SYSTEM
2382	RIGHT-HAND BLIND SPOT WARNING LIGHT
2383	LEFT-HAND BLIND SPOT WARNING LIGHT
2384	CAMERA COMPUTER (AVM)
2385	FRONT CAMERA
2390	INSTRUMENTATION COMPUTER
2391	BLIND SPOT WARNING ELECTRONIC CONTROL UNIT
2392	FRONT RIGHT-HAND BLIND SPOT SENSOR
2393	FRONT LEFT-HAND BLIND SPOT SENSOR
2394	REAR RIGHT-HAND BLIND SPOT SENSOR
2395	REAR LEFT-HAND BLIND SPOT SENSOR
2396	DASHBOARD CONTROL FOR REAR RIGHT-HAND ELECTRIC WINDOW
2397	DASHBOARD CONTROL FOR REAR LEFT-HAND ELECTRIC WINDOW
2398	CITY MODE CONTROL
2400	HEAD-UP DISPLAY
2402	MULTIFUNCTION CONTROL SCREEN
2403	FRONT LEFT-HAND SIDE AMBIENT LIGHTING
2404	FRONT RIGHT-HAND SIDE AMBIENT LIGHTING
2405	REAR LEFT-HAND SIDE AMBIENT LIGHTING
2406	REAR RIGHT-HAND SIDE AMBIENT LIGHTING
2407	
2408	
2409	REAR LEFT-HAND ROOF AMBIENT LIGHTING
2410	REAR RIGHT-HAND ROOF AMBIENT LIGHTING
2411	FRONT LEFT-HAND SIDE DETECTION SENSOR FOR PARKING DISTANCE CONTROL
2412	FRONT RIGHT-HAND SIDE DETECTION SENSOR FOR PARKING DISTANCE CONTROL
2413	REAR LEFT-HAND SIDE DETECTION SENSOR FOR PARKING DISTANCE CONTROL
2414	REAR RIGHT-HAND SIDE DETECTION SENSOR FOR PARKING DISTANCE CONTROL
2420	PRESSURE SENSOR CYLINDER 4
2421	AMBIENT LIGHTING REAR LEFT-HAND DOOR
2422	AMBIENT LIGHTING REAR RIGHT-HAND DOOR
2423	REAR LEFT-HAND SEAT BASE HEATED PAD
2424	REAR RIGHT-HAND SEAT BASE HEATED PAD

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
2425	FLEXFUEL PREHEATING UNIT
2426	REAR SEAT FOLDING CONTROL
2432	RIGHT-HAND ADAPTIVE PRETENSIONER
2433	LEFT-HAND ADAPTIVE PRETENSIONER
2434	LUGGAGE COMPARTMENT ACCESS SENSOR
2435	READER WITH CAR CLUB ACCESS
2437	THROTTLE VALVE UPSTREAM AIR TEMPERATURE SENSOR
2439	SECONDARY AIR PUMP RELAY
2446	ENERGY CONTROLLER
2447	RECTIFIER
2448	VOLTAGE CONVERTER
2449	CONNECTION BOARD
2450	TRACTION MOTOR TEMPERATURE SENSOR 1
2451	TRACTION MOTOR TEMPERATURE SENSOR 2
2452	PASSENGER DOOR MIRROR COMPUTER
2456	LUGGAGE COMPARTMENT LIGHT ANTI-RETURN DIODE
2457	REAR LEFT-HAND SEAT FOLDING MOTOR
2458	REAR RIGHT-HAND SEAT FOLDING MOTOR
2459	REAR CENTRAL SEAT FOLDING MOTOR
2460	REAR RIGHT-HAND SEAT FOLDING MOTOR, 3RD ROW
2461	REAR LEFT-HAND SEAT FOLDING MOTOR, 3RD ROW
2462	AUTOMATIC GEARBOX PARKING FINGER ACTUATOR RELAY
2466	CENTRAL FRONTAL SATELLITE
2467	EVENT CHECK OF PASSENGER FRONT AIRBAG
2468	MULTIMEDIA ACCESSORIES SOCKET No. 2
2470	DRIVER'S SEAT LUMBAR ADJUSTMENT MOTOR
2471	DRIVER'S SEAT LUMBAR ADJUSTMENT MOTOR 2
2472	PASSENGER SEAT LUMBAR ADJUSTMENT MOTOR
2473	PASSENGER SEAT LUMBAR ADJUSTMENT MOTOR 2
2474	DRIVER'S SEAT FAN MOTOR
2475	PASSENGER SEAT FAN MOTOR
2476	REAR RIGHT-HAND SEAT LOCKING SENSOR, 2ND ROW
2477	REAR LEFT-HAND SEAT LOCKING SENSOR, 2ND ROW
2478	REAR CENTRAL SEAT LOCKING SENSOR, 2ND ROW
2479	REAR LEFT-HAND SEAT LOCKING SENSOR, 3RD ROW
2480	REAR RIGHT-HAND SEAT LOCKING SENSOR, 3RD ROW
2481	DRIVER'S SEAT FAN MOTOR 2
2482	PASSENGER SEAT FAN MOTOR 2
2483	STEERING WHEEL HEATING CONTROL
2484	STEERING WHEEL HEATING RESISTOR
2485	ADDITIONAL HEATER PLUG 5
2488	RETRACTABLE ROOF FRONT POSITION SENSOR
2489	RETRACTABLE ROOF GAUGE REAR POSITION SENSOR
2494	CHARGE MANAGEMENT COMMUNICATION MODULE
2496	ALARM MICROWAVE SENSOR
2497	ALARM MICROWAVE SENSOR 2
2499	STEERING WHEEL HEATING RELAY
2500	ENGINE AND TRANSMISSION ASSEMBLY ECU
2503	INDUCTIVE CHARGER
2504	INVERTER
2505	HEATED REAR WINDOW ANTI-INTERFERENCE FILTER 3
2510	BATTERY HEATING TEMPERATURE SENSOR
2512	LOW PRESSURE EGR SOLENOID VALVE TEMPERATURE SENSOR

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
2513	FRONT LEFT-HAND DOOR AMBIENT LIGHTING
2514	FRONT RIGHT-HAND DOOR AMBIENT LIGHTING
2515	FRONT LEFT-HAND FOOTWELL LIGHT
2516	FRONT RIGHT-HAND FOOTWELL LIGHT
2517	PASSENGER STORAGE COMPARTMENT OPENING CONTROL
2518	PASSENGER STORAGE COMPARTMENT UNLOCKING MOTOR
2519	ELECTRONIC PARKING BRAKE CONTROL AND CRUISE CONTROL/SPEED LIMITER CONTROL
2520	CLUTCH PRESSURE SENSOR
2521	GEARBOX COOLING ACTUATOR
2522	TUMBLE POSITION SENSOR
2523	HIGH PRESSURE FUEL PUMP RELAY
2524	INJECTOR RELAY
2525	INJECTOR RELAYS 2
2526	PARTICLE SENSOR
2527	PARKING DISTANCE CONTROL ON STOP AND START VERSION
2528	TRACTION BATTERY FILTER
2529	JUNCTION BOX 1
2530	JUNCTION BOX 2
2532	JUNCTION BOX 4
2533	JUNCTION BOX 5
2535	JUNCTION BOX 7
2536	JUNCTION BOX 8
2537	JUNCTION BOX 9
2538	JUNCTION BOX 10
2539	JUNCTION BOX 11
2540	JUNCTION BOX 12
2542	JUNCTION BOX 14
2543	JUNCTION BOX 15
2546	FRONT LEFT-HAND HEATED SEATBACK PAD
2547	FRONT RIGHT-HAND HEATED SEATBACK PAD
2550	MOTORISED TAILGATE THERMAL PROTECTION
2557	FRONT CEILING LIGHT AMBIENCE LIGHTING
2558	GEARBOX OIL PUMP ANTI-RETURN DIODE
2559	FRONT LEFT-HAND SEATBACK MOTOR
2560	FRONT LEFT-HAND SEAT BASE MOTOR
2561	FRONT LEFT-HAND SEAT HEIGHT ADJUSTER MOTOR
2562	FRONT-LEFT HAND SEAT FAN MOTOR
2563	FRONT LEFT-HAND SEAT FAN MOTOR 2
2564	FRONT LEFT-HAND SEAT LUMBAR ADJUSTMENT MOTOR
2565	FRONT LEFT-HAND SEAT LUMBAR ADJUSTMENT MOTOR 2
2566	FRONT LEFT-HAND SEAT ADJUSTMENT CONTROL
2567	FRONT LEFT-HAND SEAT POSITION MEMORY COMPUTER
2568	FRONT RIGHT-HAND SEAT BASE MOTOR
2569	FRONT RIGHT-HAND SEAT HEIGHT ADJUSTER MOTOR
2570	FRONT RIGHT-HAND SEAT BACK MOTOR
2571	FRONT RIGHT-HAND SEAT FAN MOTOR
2572	FRONT RIGHT-HAND SEAT FAN MOTOR 2
2573	FRONT RIGHT-HAND SEAT LUMBAR ADJUSTMENT MOTOR
2574	FRONT RIGHT-HAND SEAT LUMBAR ADJUSTMENT MOTOR 2
2575	FRONT RIGHT-HAND SEAT ADJUSTMENT CONTROL
2576	FRONT RIGHT-HAND SEAT POSITION MEMORY COMPUTER
2577	AFTER IGNITION RELAY N 3 (AP3)
2578	DRIVER'S SEAT HEATING AND VENTILATION CONTROL

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
2579	PASSENGER SEAT HEATING AND VENTILATION CONTROL
2580	DRIVER'S SEAT HEATING AND VENTILATION ELECTRIC CONTROL UNIT
2581	PASSENGER SEAT HEATING AND VENTILATION ELECTRIC CONTROL UNIT
2582	FRONT LEFT-HAND SEAT HEIGHT ADJUSTER MOTOR
2583	FRONT RIGHT-HAND SEAT HEIGHT ADJUSTER MOTOR
2584	LEFT-HAND ANTI-PINCH SEAL
2585	RIGHT-HAND ANTI-PINCH SEAL
2586	LEFT-HAND TAILGATE ACTUATOR
2587	RIGHT-HAND TAILGATE ACTUATOR
2589	HEATED PAD FOR 12 V BATTERY
2590	FRONT LEFT-HAND MICROPHONE
2591	FRONT RIGHT-HAND MICROPHONE
2592	REAR MICROPHONE
2593	FRONT CAMERA AND RADAR COOLING MODULE
2594	CHARGE SUPERVISOR
2597	MOVABLE TOWBAR POSITION SENSOR
2598	MOVABLE TOWBAR AUDIBLE WARNING
2599	MOBILE TOW LINKAGE INDICATOR
2600	RELAY FOR AUTOMATIC DOOR MIRROR FOLD IN
2601	RELAY FOR AUTOMATIC DOOR MIRROR FOLD OUT
2602	SPEAKER EMERGENCY CALL
2605	HOT LOOP 1 SOLENOID VALVE
2608	ELECTROTECHNICAL CIRCUIT COOLANT PUMP
2609	SUPERVISOR ECU SUPPLY RELAY
2610	SUPERVISION WATER TEMPERATURE SENSOR
2611	AMBIENT LIGHTING CONTROL
2612	TOP DEAD CENTRE SENSOR 2
2613	UREA PUMP ECU
2614	UREA PUMP SUPPLY RELAY
2615	ENGAGEMENT POSITION SENSOR 1/3
2616	LEFT-HAND CENTRE SIDE DETECTION SENSOR
2617	RIGHT-HAND CENTRE SIDE DETECTION SENSOR
2618	TRACTION BATTERY CONNECTION UNIT
2619	REMOTE ENGINE STARTING RELAY
2620	CAN CORE GATEWAY
2621	SEQUENTIAL GEARBOX ACTUATOR CUT-OFF RELAY
2622	FUSE BOX INTEGRATED IN WIRING
2623	ELECTRIC CAMSHAFT SOLENOID VALVE
2624	ELECTRIC CAMSHAFT SOLENOID VALVE SENSOR
2625	ELECTRIC CAMSHAFT CONTROL ECU
2626	FUSE BOX INTEGRATED IN WIRING 2
2629	SCR COOLANT PUMP
2630	AMBIENCE LIGHTING DRIVER'S DOOR 2
2631	AMBIENCE LIGHTING FRONT PASSENGER DOOR 2
2636	HYBRID BRAKING ASSISTANCE
2637	400 V TO 14 V VOLTAGE CONVERTOR
2638	VOLTAGE CONVERTOR 200 V TO 14 V
2640	3KW CHARGER
2641	
2642	
2643	MAIN ELECTRIC MOTOR INVERTER
2644	HIGH SPEED GENERATOR MOTOR INVERTER
2645	HYBRID INJECTION ECU

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
2648	ADVANCED DRIVER ASSISTANCE SYSTEMS COMPUTER
2649	UREA QUALITY SENSOR
2650	CAMERA VIEW SWITCH BUTTON (AVM)
2651	SECOND ROW REAR CENTRE PASSENGER PRESENCE SENSOR
2652	SCENE RECORDER ECU
2653	PARTICLE SENSOR SUPPLY RELAY
2658	360 DEGREE OUTSIDE VIEW (AVM)
2659	RAPID CHARGE UNIT
2660	CHARGE MODE SWITCH/GRIP CONTROL
2661	INTEGRATED FUEL PUMP AND GAUGE MODULE
2663	FRONT PASSENGER DETECTION SYSTEM
2667	AMBIENT NOISE SUPPRESSION COMPUTER
2668	SWITCH BAR
2670	WATER TURBOCHARGING AIR COOLER WATER PUMP (WCAC)
2671	VOLUMETRIC ALARM ECU
2672	MULTI-VIEW CAMERA ECU
2673	TURBOCHARGER SPEED SENSOR
2674	WATER TURBOCHARGING AIR COOLER (WCAC) TEMPERATURE SENSOR
2675	WCAC 1 DISSOCIATION VALVE
2676	UPSTREAM WCAC TEMPERATURE SENSOR
2677	DOWNSTREAM WCAC TEMPERATURE SENSOR
2686	DIESEL PARTICULATE FILTER (DPF) SWITCH
2687	REAR RIGHT-HAND SIDE RADAR
2688	REAR LEFT-HAND SIDE RADAR
2690	HIGH VOLTAGE STARTER ALTERNATOR MOTOR (HSG)
2691	REAR AIR CONDITIONING ON/OFF SWITCH
2692	REAR AIR CONDITIONING STATUS LIGHT
2699	PASSENGER COMPARTMENT RELAY BOARD 1
2700	PASSENGER COMPARTMENT RELAY BOARD 2
2701	PASSENGER COMPARTMENT RELAY BOARD 3
2702	PASSENGER COMPARTMENT RELAY BOARD 4
2703	PARKING MODE SWITCH / GEARBOX MODE
2704	ELECTRO-HYDRAULIC 4WD CONTROL COMPUTER
2705	
2706	HYBRID TRACTION RELAY
2709	ELECTRO-HYDRAULIC 4WD PUMP
2710	DUAL LAYER CAPACITY
2716	CENTRAL PASSENGER PRESENCE SENSOR
2719	FRONT CENTRE SEAT BELT SWITCH
2721	ADAPTIVE HEADLIGHTS (ADB) ECU
2724	TRACTION BATTERY ECU (BMS) MASTER
2725	TRACTION BATTERY ECU (BMS) SLAVE 1
2726	TRACTION BATTERY ECU (BMS) SLAVE 2
2727	TRACTION BATTERY ECU (BMS) SLAVE 3
2728	TRACTION BATTERY ECU (BMS) SLAVE 4
2729	TRACTION BATTERY ECU (BMS) SLAVE 5
2730	TRACTION BATTERY ECU (BMS) SLAVE 6
2731	TRACTION BATTERY ECU (BMS) SLAVE 7
2732	TRACTION BATTERY ECU (BMS) SLAVE 8
2733	TRACTION BATTERY ECU (BMS) SLAVE 9
2734	TRACTION BATTERY ECU (BMS) SLAVE 10
2735	TRACTION BATTERY ECU (BMS) SLAVE 11
2736	TRACTION BATTERY ECU (BMS) SLAVE 12

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
2739	RIGHT-HAND FLAG HEADLIGHT
2740	LEFT-HAND FLAG HEADLIGHT
2741	RIGHT-HAND INDICATOR HEADLIGHT
2742	LEFT-HAND INDICATOR HEADLIGHT
2743	SMART VEHICLE ADAPTER (SCA) ECU
2744	STEERING COLUMN CONTROL MODULE (SCCM)
2745	SAFETY BATTERY MODULE (STBM)
2746	DAIMLER INTERFACE UNIT (DAII)
2749	FUEL TANK COMPUTER (EVAP COMPUTER)
2752	HANDS-FREE DUAL RADIO TELEPHONE MICROPHONE
2755	PWM ELECTRIC COOLANT PUMP
2756	LIQUEFIED PETROLEUM GAS DIAGNOSTIC SOCKET
2757	RIGHT-HAND BUMPER REVERSING LIGHT
2758	LEFT-HAND BUMPER REVERSING LIGHT
2759	TIMED + BATTERY FEED NON-LOAD SHED 3 RELAY
2761	INDUCTIVE CHARGER LED MODULE
2762	FUEL VAPOUR REABSORPTION PRESSURE DIAGNOSTIC SENSOR
2763	MODULE 10 TEMPERATURE SENSOR
2764	MODULE 11 TEMPERATURE SENSOR
2765	DC CAPACITY MODULE
2766	AC CAPACITY MODULE
2767	(AUTOMATIC) CHARGER SMOOTHING INDUCTANCE MODULE
2768	EXHAUST TEMPERATURE SENSOR 2
2769	INSTRUMENT PANEL ADAPTATION HOUSING
2771	PETROL PARTICLE FILTER (GPF) UPSTREAM/DOWNSTREAM TEMPERATURE SENSOR
2772	DRIVER'S FRONT AIRBAG CONTROLLED VENT
2776	CHASSIS SUPERVISOR (CDM)
2777	FAN ASSEMBLY FUSE BOX
2779	MULTIFUNCTIONAL FLOWMETER
2780	ELECTRIC CAMSHAFT RELAY
2783	EVAP PRESSURE SENSOR
2786	SECOND BLEED CONTROL VALVE
2788	TANK CLOSURE VALVE
2789	CENTRAL PERMANENT RETRO-VISION (SRVM)
2792	DUAL BATTERY COUPLER (DBC)
2793	LOW HORN / LOCKING WHEN MOVING AWAY (WAC)
2794	ELECTRIC TOWBAR MODULE UNIT
2803	CENTRAL PERMANENT RETRO-VISION CAMERA
2817	FRONT LEFT-HAND SEAT POSITION SENSOR
2818	FRONT RIGHT-HAND SEAT POSITION SENSOR
2819	NOX SENSOR UNDER FLOOR
2820	KEYLESS VEHICLE REAR COURTESY LIGHT AERIAL 1
2821	KEYLESS VEHICLE REAR COURTESY LIGHT AERIAL 2
2822	LEFT-HAND FRONT DOOR LOCKING MICRO SWITCH
2823	RIGHT-HAND FRONT DOOR LOCKING MICRO SWITCH
2824	HIGH PRESSURE EGR SOLENOID VALVE
2825	EVAPORATOR LEAK CONTROL MODULE (ELCM)
2826	FRONT LEFT-HAND HEATED/VENTILATED SEAT ECU
2827	FRONT RIGHT-HAND HEATED/VENTILATED SEAT ECU
2837	EVAP TANK 2 PRESSURE SENSOR
2838	BY-PASS VALVE
2839	TURBOCHARGING UPSTREAM AIR FLAP TEMPERATURE SENSOR
2848	ALLIANCE INTELLIGENT CURRENT SENSOR (AIBS)

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
2851	MASTER VAC 2 BRAKE SERVO VACUUM SENSOR
2852	SATELLITE POSITIONING SYSTEM ANTENNA (GNSS)
2854	4TH SEAT CENTRAL REAR SEAT BELT BUCKLE SWITCH
2857	ADDITIONAL SCR TANK HEATER
2859	FAP/EGR DIFFERENTIAL PRESSURE SENSOR
2860	MULTIMEDIA ACCESSORIES SOCKET 3
2863	ONBOARD CHARGER/DCDC CARD (OBC_DCDC)
2864	INVERTER/DISTRIBUTOR TABLE
2870	REAR CEILING AMBIENT LIGHTING
2875	WIFI AERIAL
2878	ANALOGUE LIGHT SENSOR
2880	
2883	
2885	
2886	
2887	
2888	
2891	HORN RELAY 2
2892	HEATED WINDSCREEN CONTROL
2893	
2895	DEDICATED SHORT RANGE COMMUNICATIONS (DSRC) ANTENNA
2897	UREA DOSAGE ECU (UDCU)
2898	UREA INJECTOR 2
2899	UREA PUMP GAUGE MODULE
2900	FRONT LEFT-HAND SEAT PNEUMATIC ECU (SPCU)
2901	FRONT RIGHT-HAND SEAT PNEUMATIC ECU (SPCU)
2902	
2903	
2906	CHARGE CONTROL LINE FILTER UNIT
2922	
2935	AIR CONDITIONING FAN ASSEMBLY RESISTOR 2
2937	AUTOMOBILE TELEMATICS UNIT ECU
2942	EXTERIOR AIR PARTICLE SENSOR
2943	REAR BUMPER HANDS-FREE CARD DETECTION AERIAL 2
2944	PASSENGER COMPARTMENT AIR PARTICLE SENSOR
2958	
2959	
2961	PASSENGER COMPARTMENT RELAY BOARD 5
2964	
2965	
2966	VARIABLE VALVE CONTROL SOLENOID VALVE (VVA)
2971	CAR CLUB CONVERSION UNIT (SCA)
2972	CAR CLUB TELEMATICS UNIT (CSTB)
2996	
3015	FRONT CENTRE INERTIA REEL PRETENSIONER
3018	CPU FUEL GAUGE AND PUMP INTEGRATED WITH TEMPERATURE SENSOR
3019	HIGH-PRESSURE TURBINE BYPASS SOLENOID VALVE ACTUATOR
3067	
3073	FRONT LEFT-HAND SEAT PNEUMATIC PUMP
3074	FRONT RIGHT-HAND SEAT PNEUMATIC PUMP
3075	
3081	SCR UPSTREAM/DOWNSTREAM EXHAUST GAS TEMPERATURE SENSOR
3090	WATER TEMPERATURE SENSOR ELECTRONIC POWER UNIT

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
3141	DATA PRIVACY SWITCH (DPS)
7501	DEAD WIRE 1 TRACK
7502	DEAD WIRE 2 TRACKS
7503	DEAD WIRE 3 TRACKS
7504	DEAD WIRE 4 TRACKS
8800	RIGHT-HAND FRONT SPEAKER + SIGNAL SPLICE CONNECTOR
8801	RIGHT-HAND FRONT SPEAKER - SIGNAL SPLICE CONNECTOR
8802	LEFT-HAND FRONT SPEAKER + SIGNAL SPLICE CONNECTOR (TWEETER)
8803	LEFT-HAND FRONT SPEAKER - SIGNAL SPLICE CONNECTOR (TWEETER)
8900	MAM ELECTRIC EARTH SPLICE CONNECTOR (RIGHT-HAND SIDE DASHBOARD CROSS MEMBER)
8905	MAM+MAN ELECTRIC EARTH SPLICE CONNECTOR (RH AND LH SIDE DASHBOARD CROSS MEMBER)
8910	MK ELECTRIC EARTH SPLICE CONNECTOR (LEFT-HAND A PILLAR A)
8911	MK ELECTRIC EARTH SPLICE CONNECTOR (LEFT-HAND A PILLAR B)
8915	MAS ELECTRIC EARTH SPLICE CONNECTOR (FRONT LEFT-HAND SIDE MEMBER)
8920	MH AND MHA ELECTRIC EARTH SPLICE CONNECTOR (ENGINE)
9997	AUDIBLE WARNING MODULE SPECIAL FEATURES