

[← Back](#)

REVERSING CAMERA: BEFORE/AFTER REPAIR PROCEDURE

1 - PROCEDURE TO BE APPLIED AFTER REPAIR

1. Force the vehicle's + after ignition feed.
2. Switch on the multimedia system: (see, General information - switching multimedia system on and off)
3. Activate SC002 REVERSING CAMERA CALIBRATION (COMMUNICATIONS UNIT)
4. Activate SC009 SAVE COMPUTER DATA (COMMUNICATIONS UNIT)
5. Activate SC008 WRITE SAVED DATA (COMMUNICATIONS UNIT)
6. Activate RZ002 ECU MEMORY (COMMUNICATIONS UNIT)
7. Engage reverse gear to switch on the reversing camera system.
8. Consult the DTCs for: COMMUNICATIONS UNIT

[Continue](#)

