

[← Back](#)

MULTIMEDIA DISPLAY: REMOVAL - REFITTING



Caution, one or more warnings are listed in this method



Mandatory specific tool

Set of trim removal levers.	Car.1363	
-----------------------------	----------	--

Material

Diagnostic tool

INTRODUCTION




WARNING

Before carrying out any operation on a vehicle fitted with the Stop & Start system, always follow the safety instructions (see, vehicle : precautions for the repair) .

1 - MULTIMEDIA DISPLAY: REMOVAL - REFITTING


1.1 - REMOVAL PREPARATION OPERATION

- In the event of a replacement, apply the Before repair procedure using the **Diagnostic tool**:
 - connect the **Diagnostic tool**,
 - select "multimedia display computer",
 - go to repair mode,
 - display the "before/after repair procedure" for the computer selected,
 - carry out the operations described in the "Before repair procedure" section.
- Disconnect the 12 V battery (see, 12 V battery : removal - refitting) .

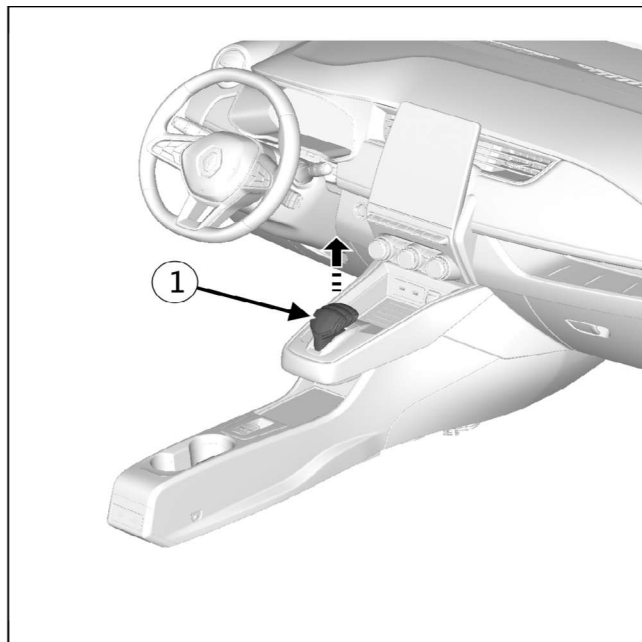


RPR-001044296-01-000263622

- Remove the automatic gearbox control knob (1) in the direction indicated by the arrow (see, gear lever knob : removal - refitting) .

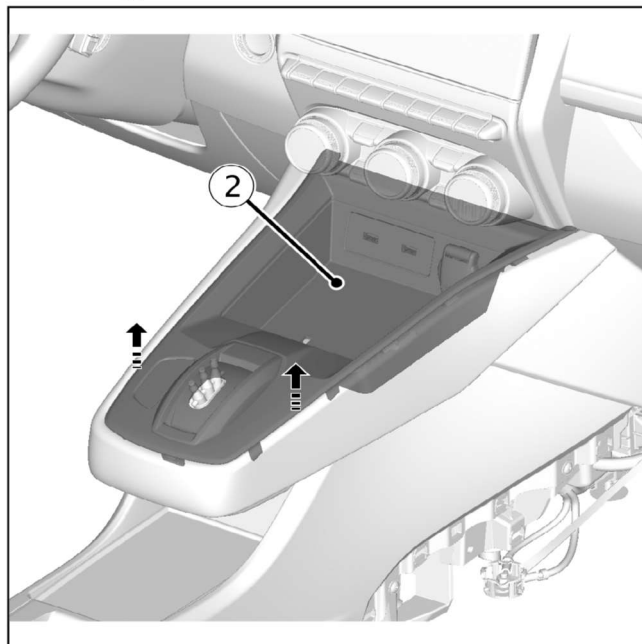


RPR-001044296-04-000263628

- Remove the gear lever trim (2) from the centre console in the direction of the arrow using the (Car.1363) .

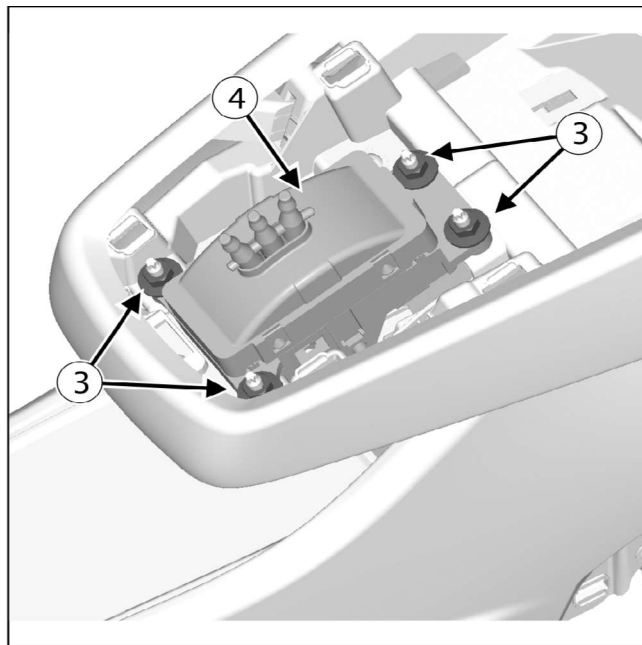


RPR-001044296-05-000263630

- Remove the bolts (3) .
- Take out the gearbox control unit (4) .
- Disconnect its connector.

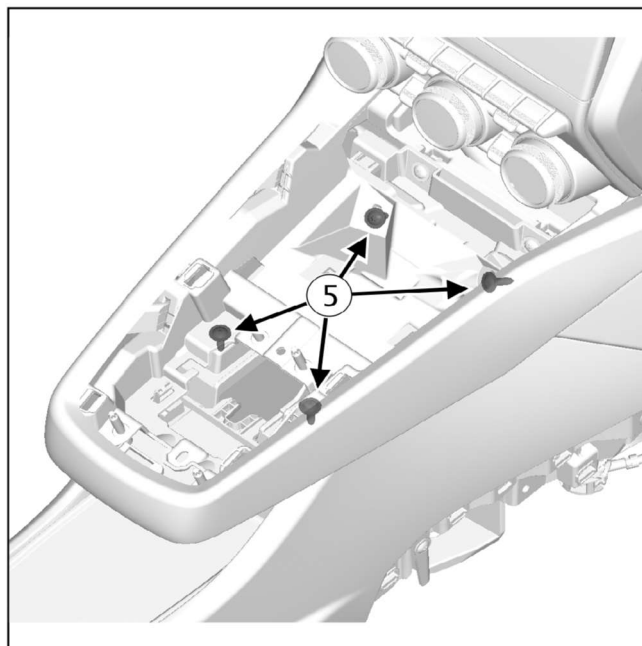


RPR-001044296-06-000263632

- Remove the bolts (5) .

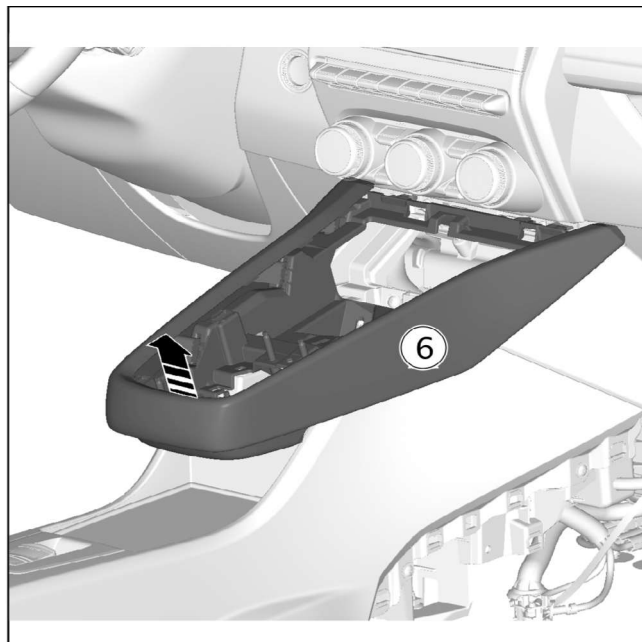


RPR-001044296-09-000263634

- Remove the console upper front panel (6) in the direction of the arrow.
- Unclip the wiring.

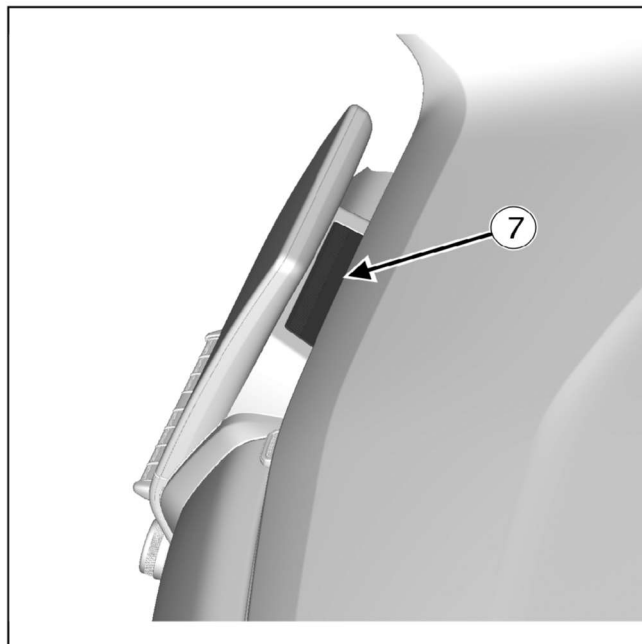


RPR-001044296-08-000221587

- Remove the trim (7) using the (Car.1363) .

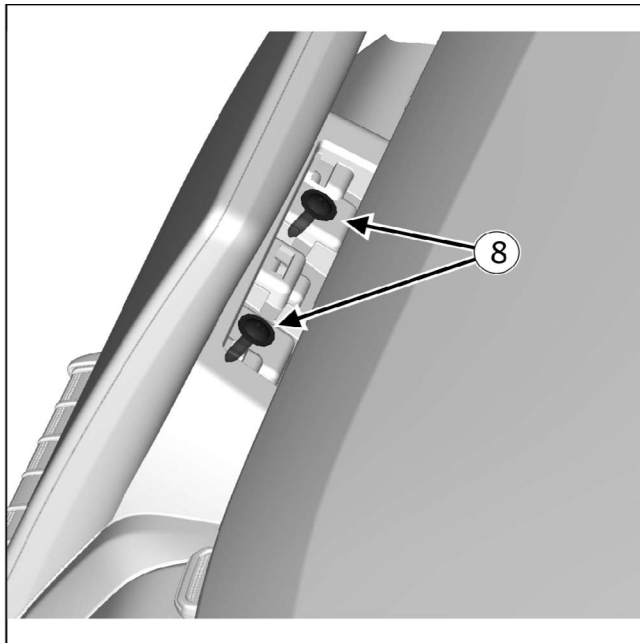


RPR-001044296-07-000221589

- Remove the bolts (8) .

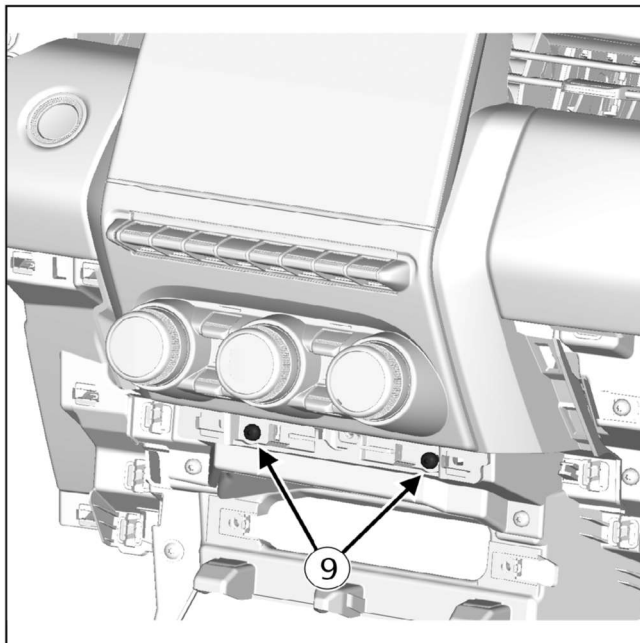

RPR-001044296-10-000221871


- Remove the bolts (9) .

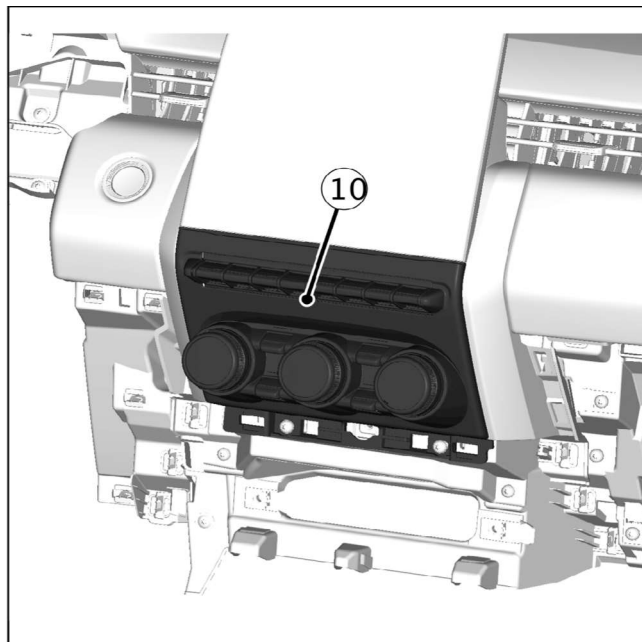

RPR-001044296-11-000221585


- Remove the piano bar control and air conditioning control plate assembly (10) ,
- Disconnect:
 - the piano bar,
 - the air conditioning control panel.

1.2 - REMOVAL

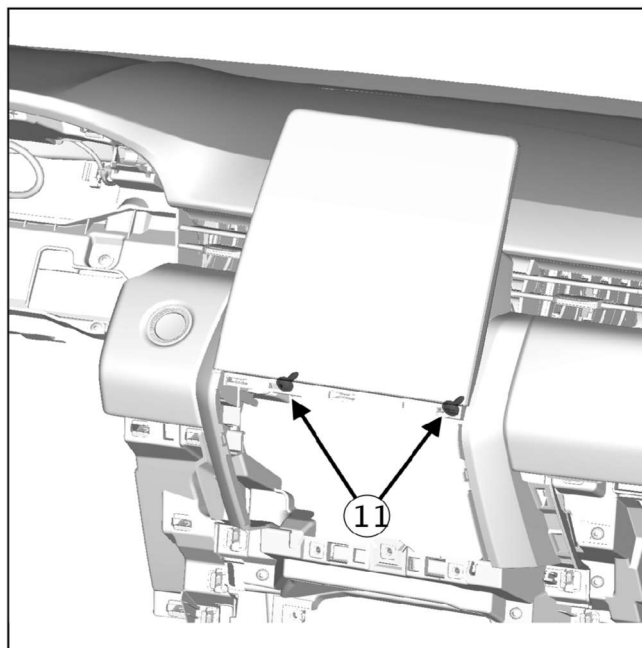

RPR-001044296-12-000221591

- Remove the bolts (11) .

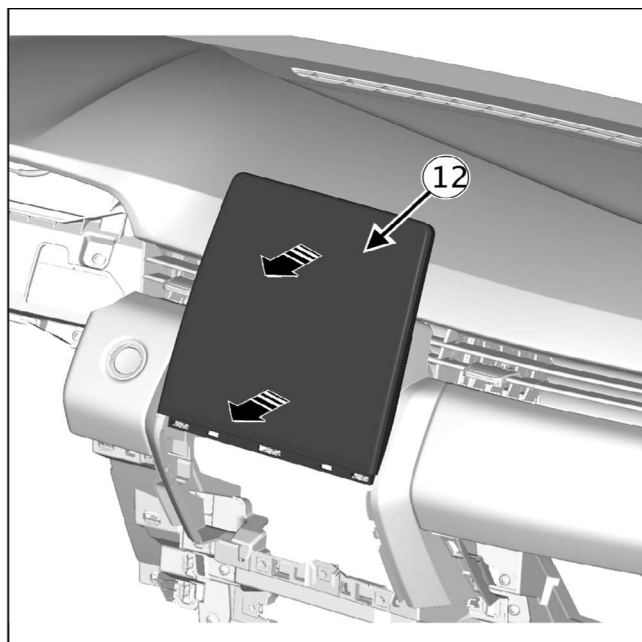

RPR-001044296-13-000221593

- Remove the multimedia display (12) , using the (Car.1363) in the direction indicated by the arrow.
- Disconnect the navigation display connectors.

2 - REFITTING

2.1 - REFITTING OPERATION

- Proceed in the reverse order to the removal operations.

2.2 - FINAL OPERATION

- Apply the after repair procedure using the **Diagnostic tool**:
 - connect the **Diagnostic tool**,
 - select "multimedia display",
 - go to repair mode,
 - display the "Before/after repair procedure" for the computer selected,
 - select "Navigation aerial" in the "List of components controlled by this computer" section,
 - carry out the operations described in the "After repair procedure" section.

Version : B.2